A	ISSUE MOD No. REASON - INITIAL - 1 INTRODUCTION RSR - 24/03/2022	10 DATE A
в	Single Stage Configuration Config.: 1 Stage 1: Apply Power to Live & Neutral	В
с	Live Neutral	C
D		D
E		E
F		F
G	ANGULAR DIMENSIONAL TOLS ANGULAR DIMENSIONAL T	