



Г		Т
	ISSUE MOD No. REASON - INITIAL - DATE	_
	WIRING LINKING REACON & SOLINDER	
А	FACTORY FITTED	A
		_
	Linked Sounder & Beacon Activation (Default)	
	Two Stage Configuration Config.: 4	
	independent Stage Input	
L	Line stage womoning (use suitable momoning read/s/modules) Not to be used for reverse polarity monitoring	
В	Stage 1: Apply Power to Stage 1 +ve & Stage 1 -ve	-В
	Stage 1: Apply Power to Stage 2 +ve & Stage 2 -ve	
С		
ľ		Ũ
_		
D		D
-		-
L		_
E		E
	Stage 1 +ve +	
		-
F		F
ľ		Ľ
		-
6	CHECKED DATE MALENIAL SYSTEMETTO INTHE TYCE WHOLE DOT ANY TYPE TO THE HIGH DOT ANY TYPE	
	STANDARDS B.ISARD 19/01/2022 WITTER CONFIGN OF CONTINUE OF THE CONFERENCE OF CONTINUES OF THE CONFERENCE OF CONFIGURATION OF CONTINUES OF THE CONFERENCE OF CONTINUES OF THE CONFERENCE OF CONFIGURATION OF CONTINUES OF THE CONFERENCE OF CONFIGURATION OF CONTINUES OF THE CONFERENCE OF CONFIGURATION OF CONTINUES OF THE CONFERENCE OF CONTINUES OF THE CONFERENCE OF CONTINUES OF THE CONFERENCE OF CONFIGURATION OF CONTINUES OF THE CONFERENCE OF CONFERENCE OF CONTINUES OF THE CONFERENCE OF CONFERENCE OF CONTINUES OF THE CONFERENCE OF CONFERENCE OF CONFERENCE OF CONFERENCE OF CONFERENCE OF CONFERENCE OF CONFERE	J
	ALERTALARM RANGE APPROVED DATE ALTERNATIVE MATERIAL AS PER LATEST DATE OF ISSUE SHOWN ABOVE LONDON WATCH SCALE SHEET DRAWING NUMBER	
	R.N.POTTS 19/01/2022 NTS 3 0F6 D190-06-301	





