
# **INSTRUCTION MANUAL**

# D2xC1 Alarm Horn and Strobe

# For use in Hazardous Locations



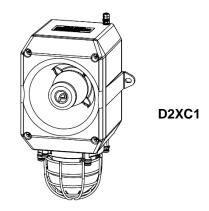

# 1) Product Table

Model	Nom. Voltage	Voltage Range	Operating Current	Max Current
D2xC1X05DC024	24Vdc	20-28Vdc	513mA	521mA @ 20Vdc
D2xC1x05DC048	48Vdc	42-58Vdc	311mA	328mA @ 42Vdc
D2xC1x05AC115	115Vac	115-125Vac 60Hz	174mA	183mA @ 125Vac
D2xC1x05AC230	230Vac	215-250Vac50Hz	63mA	77mA @ 250Vac
D2xC1X10DC024	24Vdc	20-28Vdc	876mA	876mA @ 20Vdc
D2xC1x10DC048	48Vdc	42-58Vdc	461mA	475mA @ 42Vdc
D2xC1x10AC115	115Vac	115-125Vac 50Hz	320mA	343mA @ 125Vdc
D2xC1x10AC230	230Vac	215-250Vac 60Hz	100mA	115mA @ 250Vdc
Table 1: Electrical Ratings	<del>.</del> S.			

# 2) Introduction

The D2xC1 is an ATEX, IECEx, UKEX and UL certified Alarm Horn and Strobe which produces a loud warning signal and bright visual signal in a hazardous area. Sixty-Four first stage alarm sounds can be selected by internal switches and each one can be externally changed to a second, third or fourth stage alarm sound. The unit may be used for Gas applications in Zone 2 / Class I Zone 2 / Class I, Division 2 as well as for Dust applications in Zone 22 / Class II Zone 22 / Class II Divison 2 / Class III Division 1 & 2. The beacon flashes at a set rate of 1Hz. The D2xC1X05DC024 & D2xC1X10DC024 are also listed as Audible & Visual Appliances for use in Fire Alarm Systems Private Mode in accordance with UL464 Tenth Edition & UL1638 Fourth Edition.

# 3) Warnings

SUITABLE FOR USE IN CLASS II, DIVISION 2, GROUPS A, B, C AND D HAZARDOUS LOCATIONS

SUITABLE FOR USE IN CLASS II, DIVISION 2, GROUPS E, F AND G HAZARDOUS LOCATIONS

WARNING: DO NOT OPEN WHEN EXPLOSIVE ATMOSPHERE IS PRESENT

WARNING - EXPLOSION HAZARD - SUBSTITUTION OF ANY COMPONENT MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION

WARNING - EXPLOSION HAZARD - SUBSTITUTION OF ANY COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS II, DIVISION 2.

POTENTIAL ELECTROSTATIC CHARGING HAZARD - CLEAN ONLY WITH A DAMP CLOTH

USE HEAT RESISTANT CABLES AND CABLE GLANDS (RATED 90°C OR HIGHER)

EXPLOSION HAZARD. DO NOT REMOVE OR REPLACE LAMPS, FUSES OR PLUG-IN MODULES UNLESS POWER HAS BEEN DISCONNECTED OR THE AREA IS KNOWN TO BE FREE OF IGNITIBLE CONCENTRATIONS OF FLAMMABLE GASES OR **VAPORS** 

EXPLOSION HAZARD. DO NOT DISCONNECT WHILE THE CIRCUIT IS LIVE OR UNLESS THE AREA IS KNOWN TO BE FREE OF IGNITIBLE CONCENTRATIONS.

# 4) Ratings and Markings

# 4.1. Fire Alarm Ratings

The following models are approved for use as Audible and Visual Appliance for use in Fire Alarm Systems - Private Mode (UL1638/UL464): D2XC1X05DC024 & D2XC1X10DC024.

See fire instruction manual D189-00-501-IS-SC-UL

European Safety Systems Ltd. Impress House, Mansell Road, Acton, London W3 7QH Document No. D189-00-501-IS Issue 12 06-12-2023

www.e2s.com Tel: +44 (0)208 743 8880

Sheet 1 of 8

#### 4.2. ATEX / IECEx / UKEX certification

The EC-Type Examination Certificates:

DEMKO 14ATEX4786493904X, IECEx ULD14.0004X and UL21UKEX2131X have been issued by UL. This confirms compliance with the European ATEX Directive 2014/34/EU for Group II, Category 3G/D equipment. The unit carries the Community Mark and subject to local codes of practice, may be installed in any of the EEA member countries. This instruction sheet describes installations which conform to the current issue EN60079-14/IEC60079-14 Electrical Installation in Hazardous Areas; EN60079-10-1 / IEC 60079-10-1 Explosive Atmospheres - Classification of Areas. Explosive Gas Atmospheres; EN60079-10-2 / IEC 60079-10-2 Explosive Atmospheres - Classification of Areas. Explosive Dust Atmospheres. When designing systems for installation outside the UK, the local Code of Practice should be consulted.

	Standards			
EN IEC 60079-0:2018 / IEC60079-0:2017 (Ed 7):     Explosive Atmospheres - Equipment. General Requirements EN IEC 60079-7:2015 +A1:2018 / IEC 60079-7:2018 (Ed. 5.1):     Explosive Atmospheres - Equipment Protection by Increased Safety "e" EN 60079-31:2014 / IEC 60079-31:2013 (Ed 2):     Explosive Atmospheres - Equipment Dust Ignition Protection by Enclosure "t"				
Ratings				
D2XC1X05 : Ex ec IIC T2 Gc (Ta -40°C to +50°C) Ex tc IIIC T90°C Dc (Ta -40°C to +50°C)				
D2XC1X10 : Ex ec IIC T1 Gc (Ta -40°C to +50°C) Ex ec IIC T2 Gc (Ta -40°C to +40°C) Ex tc IIIC T110°C Dc (Ta -40°C to +50°C)				

# 4.3. NEC & CEC Ratings

#### NEC & CEC Class / Division Ratings for US and Canada

Standards				
UL 121201-2021 (Ed. 9) CAN/CSA C22.2 No. 213-17 (Ed. 3)				
	F	Ratings		
D2XC1: Class I Div 2				
D2XC1: Class I Div 2				
Installation must be carried out in compliance with the National Electric Code / Canadian Electric Code				

Certificate No.

DEMKO 14 ATEX 4786493904X IECEx ULD 14.0004X UL21UKEX2131X

ATEX Mark, Equipment Group and Category:



II 3G II 3D

**CE Marking** 



**UKCA Marking** 

#### **NEC Class / Zone Ratings US**

		Standards
	Explo Requ UL 6007 Explo S UL 6007 Explo	9-0 (Ed. 7): psive Atmospheres - part 0: Equipment - General prirements 9-7 (Ed. 5): psive Atmospheres - Equipment Protection by Increased parety "e" 9-31 (Ed. 2) psive Atmospheres - Equipment Dust Ignition Protection py Enclosure "t"
		Ratings
		Class I, Zone 2 AEx ec IIC T2 Gc (Ta -40°C to +50°C) Zone 22 AEx tc IIIC T120°C Dc(Ta -40°C to +50°C)
	D2XC1: X10	Class I, Zone 2 AEx ec IIC T1 Gc(Ta -40°C to +50°C) Class I, Zone 2 AEx ec IIC T2 Gc(Ta -40°C to +40°C) Zone 22 AEx tc IIIC T120°C Dc(Ta -40°C to +50°C)

Installation must be carried out in compliance with the National Electric Code.

**Standards** 

## **CEC Class / Zone Ratings Canada**

Electric Code

CAN/CSA C22.2 No. 60079-0 (Ed. 4) 02/2019 Explosive Atmospheres - Part 0: Equipment - General Requirements CAN/CSA C22.2 No. 60079-7 (Ed. 2) Explosive Atmospheres - Equipment Protection by Increased Safety "e" CAN/CSA C22.2 No. 60079-31 (Ed. 2) Explosive Atmospheres - Equipment Dust Ignition Protection by Enclosure "t"			
Rating			
D2XC1X05: Ex ec IIC T2B Gc X (Ta -40°C to +50°C) Ex ec IIC T2C Gc X (Ta -40°C to +45°C) Ex tc IIIC T120°C Dc (Ta -40°C to +50°C)			
D2XC1X10: Ex ec IIC T1 Gc X (Ta -40°C to +50°C) Ex ec IIC T2 Gc X (Ta -40°C to +40°C) Ex tc IIIC T120°C Dc (Ta -40°C to +50°C)			
Installation must be carried out in compliance with the Canadian			

European Safety Systems Ltd. Impress House, Mansell Road, Acton, London W3 7QH

www.e2s.com

Tel: +44 (0)208 743 8880 Sheet 2 of 8

# 5) Zones, Gas Group, Category and Temperature Classification

When connected to an approved system the D2X unit may be installed in:

	Area Classification			
Zone 2	Explosive gas air mixture not likely to occur in normal operation, and if it does, it will only exist for a short time.			
Zone 22	Explosive dust air mixture not likely to occur in normal operation, and if it does, it will only exist for a short time.			
	Gas Groupings			
Group IIA	Propane			
Group IIB	Ethylene			
Group IIC	Hydrogen and Acetylene			
Tempera	ture Classification for Gas Applications			
T1	450°C			
T2	300°C			
	Dust Groupings (ATEX / IECEx / UKEX only)			
Group IIIA	Combustible Flyings			
Group IIIB	Non-conductive Dust			
Group IIIC	Conductive Dust			
Maximum S	Surface Temperature for Dust Applications (ATEX / IECEx / UKEX only)			
D2XC1X05:	90°C			
D2XC1X10:	110°C			
Equipment Category				
3G / 3D				
Equipment Level Protection				
Gc, Dc				
Ambient Temperature Range				
-40°C to +70°C (Class I Div 2 only) -40°C to +50°C				
IP Rating				
IP66 to EN60529 To maintain the ingress protection rating, the two off cable entries must be fitted with suitably rated, certified cable entry and/or blanking devices during installation.				
	Type Rating			
Per UL50E / NEMA250: 4 / 4X / 3R / 13				

# 6) Special Conditions for Safe Use

Special Condition for safe Use as stated on the Type Examination Certificate DEMKO 14 ATEX 4786493904X / CoC IECEx ULD 14.0004X / UL21UKEX2131X:

End user shall adhere to the manufacturer's installation and instruction when performing housekeeping to avoid the potential for hazardous electrostatic charger during cleaning, by using a damp cloth.

The D2xC1 is not to be mounted with the horn facing upwards The equipment shall only be used in end use with appropriately certified cable entry devices and blanking plugs

#### 6.1 Installation

The product must only be installed by suitably qualified personnel in accordance with the latest issues of the relevant standards.

The installation of the units must also be in accordance with any local codes that may apply and should only be carried out by a competent electrical engineer who has the necessary training.

The equipment is not to be mounted with the horn facing upwards.

The equipment has not been assessed as a safety-related device (as referred to by Directive 2014/34/EU Annex II, clause 1.5).

The cable entry temperature may exceed  $+70^{\circ}$ C / the cable branching point may exceed  $80^{\circ}$ C. Therefore suitable heat resisting cables and cable glands must be used, with a rated service temperature of at least  $90^{\circ}$ C

To maintain the ingress protection rating and mode of protection, the M20 x 1.5 cable entries must be fitted with suitably rated, certified cable glands and/or suitably rated, certified blanking devices during installation. If a high IP (Ingress Protection) rating is required then a suitable sealing washer must be fitted under the cable gland. For use in explosive gas atmospheres a minimum ingress protection rating of IP54 must be maintained. For use in explosive dust atmospheres a minimum ingress protection rating of IP64 must be maintained.

Only the front cover is to be used for access to the enclosure for installation, service and maintenance. Once the product is opened, the Type Rating cannot be maintained anymore unless a full verification of the gasket material is done and there is no damage.

Connections are to be made into the terminal blocks using solid or stranded wire, sizes 0.5-2.5mm2 / AWG 20-14. Wire insulation needs to be stripped 6-7mm. Wires may be fitted securely with crimped ferrules. Terminal screws need to be tightened down with a tightening torque of 0.56 Nm / 5 Lb-in.

Internal earthing connections should be made to the internal earth terminal on the PCBA. The earth conductor should be at least equal in size and rating to the incoming power conductors. The internal earth bonding wire connects the PCBA earth terminal to the internal earth terminal in the enclosure back box.

External earthing connections should be made to the M5 earth stud, using a ring crimp terminal to secure the earth conductor to the earth stud. The external earth conductor should be at least 4mm² / AWG 11 in size.

Check that the earth bonding wire between the two castings is secure and the 'O' ring seal is in place and in good condition.

### 6.2 Maintenance, Overhaul and Repair

Maintenance, repair and overhaul of the equipment should only be carried out by suitably qualified personnel in accordance with the current relevant standards:

EN60079-19 / IEC60079-19 Explosive atmospheres - Equipment repair, overhaul and reclamation EN 60079-17 / IEC60079-17 Explosive atmospheres - Electrical installations inspection and maintenance Units must not be opened while an explosive atmosphere is present.

If opening the unit during maintenance operations a clean environment must be maintained and any dust layer removed prior to opening the unit.

European Safety Systems Ltd. Impress House, Mansell Road, Acton, London W3 7QH www.e2s.com Tel: +44 (0)208 743 8880 Document No. D189-00-501-IS Issue 12 06-12-2023 Sheet 3 of 8

# 7) Installation

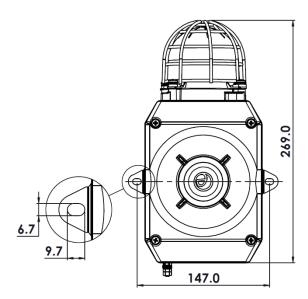


Fig. 1 Fixing locations.

D2xC1 Alarm Horn and Strobe should only be installed by trained competent personnel.

# 7.1 Mounting

The D2xC1 Alarm Horn and Strobe may be secured to any flat surface using the two 9.7 x 6.7mm, 147mm pitch fixing holes. The enclosure provides IP66 protection and is suitable for installation in exterior locations providing it is positioned so that water cannot collect in the horn, and the cable entry is sealed.

# 7.2 Installation procedure

- a) Secure the D2xC1 Alarm Horn and Strobe to a flat surface via the two 9.7 x 6.7mm, 147mm pitch fixing holes in the mounting feet
- fixing holes in the mounting feet.

  b) Remove the front of the unit by unscrewing the four captive cover screws and pulling the front away from the enclosure.
- c) Fit an M20x1.5 suitably rated, certified cable gland or conduit entry into the hole in the enclosure and connect the field wiring to the appropriate alarm horn terminals as shown in section 10 (DC) or section 11 (AC) of this manual. The power supply terminals are duplicated so that horns may be connected in parallel and for DC units only an end of line monitoring resistor may be fitted. If the second M20x1.5 entry is not used a suitably rated, certified stopping plug must always be fitted.
- d) Select the required output tone by positioning the
- six switches as shown in Table 1 and Fig 2.
  e) Adjust the internal volume control to provide the required sound level.
- f) Check that the O-ring seal in the front cover is in good condition and not damaged.
  g) Replace the front of the unit and tighten the four
- Replace the front of the unit and tighten the four captive cover screws.

# 8) Volume Control

The alarm horn output level of the D2xC1 unit can be set by adjusting the volume control potentiometer (see Fig 2). For maximum output, set the potentiometer fully clockwise.


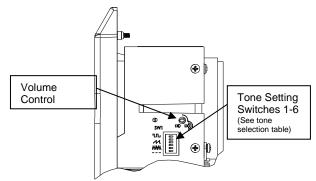


Fig. 2 Location of field controls

# 9) Cable Routing and Tone Selection

# 9.1 Cable Routing

Due to the compact design of the D2x units, it is important that the user strips the outer sheath of and biases any cables over the size of 1mm<sup>2</sup> as shown below.

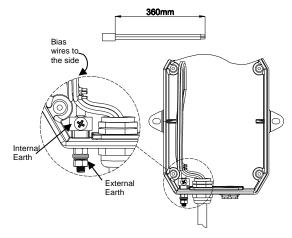

\*Glands and/or stopping plugs to be customer supplied to suit application.

Fig 3. Cables are to be stripped and biased toward side of unit with allocated spacing as shown.

## 9.2 Tone Selection

The D2xC1 alarm horns have 64 different tones. The tones are selected by operation of the tone setting DIP switches (see Fig. 2) on the PCB. The alarm horns can also be switched to sound the second, third and fourth stage alarm tones. The tone table (Table 1) shows the switch positions for the 64 tone and which tones are available for the second, third and fourth stages.

# 10) AC Wiring

# 10.1 Unit's First Stage Tones

Stage one (S1) operation: Simply connect the supply voltage to the L and N supply terminals, (see fig. 5). The Strobe is powered via factory installed wires connected to the sounder. The wires connecting the alarm horn and strobe can be removed if the user wishes to power the strobe separately.

# 10.2 Second, Third and Fourth Stage Tone Selection

To select the second, third and fourth stage tones on the D2xS1 AC alarm horns.

Stage two (S2) operation: Power L and N, link the common (C) and S2 terminal.

Stage three (S3) operation: Power L and N, link the common (C) and S3 terminals.

**European Safety Systems Ltd.** Impress House, Mansell Road, Acton, London W3 7QH www.e2s.com Tel: +44 (0)208 743 8880 Document No. D189-00-501-IS Issue 12 06-12-2023 Sheet 4 of 8

Stage four (S4) operation: Power L and N, link the common (C) and both the S2 and S3 terminals.

Strobe will continue to flash during alarm horn S2, S3 & S4 stages.

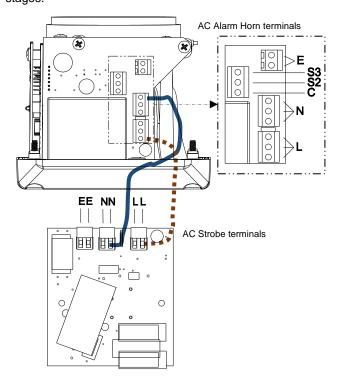
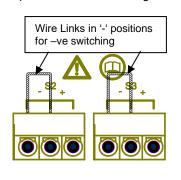


Fig. 5 AC Terminals

# 11) DC Wiring

# 11.1 DC Stage Polarity Control

The stage switches of the DC powered D2x units can be activated via Positive (+ve) or Negative (-ve) switching. All units are factory set to -ve switching as standard. If +ve switching is required, the two wire links should be removed from the '-' positions of the stage polarity control terminals and fitted to the '+' positions as shown in fig 6.



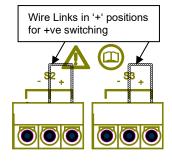


Fig. 6 Stage Polarity Control settings.

## 11.2 Units First Stage Tones

Stage one (S1) operation: Simply connect the supply voltage to the + and - supply terminals, (see fig. 8). The Strobe is powered via factory installed wires connected to the alarm horn. The wires connecting the alarm horn and strobe can be removed if the user wishes to power the strobe separately.

# 11.3 Second, Third and Fourth Stage Tone Selection For units set up for -ve switching (default setting):

Stage two (S2) operation: Power +ve and -ve, link a -ve supply line to the S2 terminal.

Stage three (S3) operation: Power +ve and -ve, link a -ve supply line to the S3 terminal.

Stage four (S4) operation: Power +ve and –ve, link a -ve supply line to both the S2 & S3 terminals.

Strobe will continue to flash during alarm horn S2, S3 & S4 stages.

# For units set up for +ve switching (refer to 9.1):

Stage two (S2) operation: Power +ve and -ve, link a +ve supply line to the S2 terminal.

Stage three (S3) operation: Power +ve and –ve, link a +ve supply line to the S3 terminal.

Stage four (S4) operation: Power +ve and –ve, link a +ve supply line to both the S2 & S3 terminals.

European Safety Systems Ltd. Impress House, Mansell Road, Acton, London W3 7QH
Document No. D189-00-501-IS Issue 12 06-12-2023

Sheet 5 of 8

Strobe will continue to flash during alarm horn S2, S3 & S4 stages.

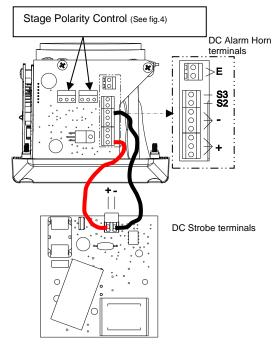


Fig. 8 DC Terminals



The unit has both internal and external earth terminals, (please see fig 3).

Internal earthing connections should be made to the internal earth terminal on the PCBA, (please see fig 5 for AC, fig 8 for DC). The earth conductor should be at least equal in size and rating to the incoming power conductors. The internal earth bonding wire connects the PCBA earth terminal to the internal earth terminal in the enclosure back box.

External earth connections should be made to the M5 earth stud, using a ring crimp terminal to secure the earth conductor to the earth stud. The external earth conductor should be at least 4mm<sup>2</sup> in size. The external earth crimp ring should be located between the two M5 plain washers provided and securely locked down with the M5 spring washer and M5 nut.

# 13) End Of Line Monitoring (DC Units Only)

On D2xC1 DC units, dc reverse line monitoring can be used if required. All DC units have a blocking diode fitted in their supply input lines. An end of line monitoring resistor can be connected across the +ve and -ve terminals. If an end of line resistor is used it must have the following values:-

	Min. Resistance	Min. Power
24V DC	3.9ΚΩ	0.5W
24 V DC	1ΚΩ	2W
48V DC	15ΚΩ	0.5W
40 V DC	3.9ΚΩ	2W

The resistor must be connected directly across the +ve and -ve terminals of the sounder board only, as shown in the following drawing. Whilst keeping its leads as short as possible, a spacing of at least 1/16 inch (1.58mm) must be provided through air and over surfaces between uninsulated live parts.

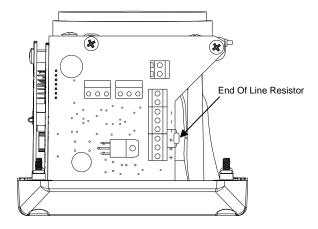


Fig. 9 End Of Line Resistor

Tone Selection - To select the required first stage tone set the tone switches 1 to 6 (see Fig 2) to the tone setting shown in the table below. The table also shows which 2<sup>nd</sup>, 3<sup>rd</sup> and 4<sup>th</sup> stage tones are available for use with the selected first stage tone if more than one tone output stage is required. Stage 2 Stage 3 Stage 4 Stage 1 Switch Settings Tone Description Tone Visual Tone Tone Tone Tone No 123456 (S2 + S3)(S2)(S3)00000 1000Hz -3 2 44 1 1000Hz PFEER Toxic Gas 1200Hz 1200/500Hz @ 1Hz DIN / 100000 2 3 44 1 500Hz PFEER P.T.A.P. 1000Hz 1s 1000Hz @ 0.5Hz(1s on, 1s 010000 3 2 44 1 off) PFEER Gen. Alarm 1600Hz 1.4KHz-1.6KHz 1s, 1.6KHz-110000 4 44 24 1.4KHz 0.5s NF C 48-265 1400Hz 544Hz 0.1s 544Hz(100mS)/440Hz 001000 5 52 19 440Hz 1 (400mS) NF S 32-001 1500Hz 1500/500Hz - (0.5s on , 0.5s 101000 6 7 44 1 off) x3 + 1s gap AS4428 500Hz 0.59 1500Hz 500-1500Hz Sweeping 2 sec 011000 7 44 500Hz 6 1 on 1 sec off AS4428 2s 500/1200Hz @ 0.26Hz(3.3s 1200Hz 111000 on, 0.5s off) Netherlands -8 44 24 35 500Hz **NEN 2575** 1000Hz (1s on, 1s off)x7 + (7s 000100 9 18 34 1 on, 1s off) IMO Code 1a 1000Hz 1s 1000Hz (1s on, 1s off)x7 + (7s on, 1s off) IMO Code 1a 100100 10 21 34 1 420Hz(0.5s on, 0.5s off)x3 + 010100 1s gap ISO 8201 Temporal 11 44 8 Pattern 1000Hz(0.5s on, 0.5s off)x3 + 1s gap ISO 8201 Temporal 1000Hz 0.5s 0.5s 0.5s 110100 12 44 1 8 Pattern 422/775Hz - (0.85 on, 0.5 775Hz off) x3 + 1s gap NFPA -001100 0.85 0.5s 0.85 0.5s 422Hz 0.85 0.5s 13 44 8 1 Temporal Coded 2000Hz 0.5s 1000/2000Hz @ 1Hz 101100 1000Hz 0.5s 35 14 23 3 Singapore 011100 300Hz 15 44 24 35 300Hz Continuous 111100 440Hz -16 44 24 35 440Hz Continuous 000010 470Hz -17 44 24 35 470Hz Continuous 500Hz Continuous IMO code 500Hz -100010 18 44 24 35 2 (Low) 010010 554Hz \_ 35 19 64 24 554Hz Continuous 110010 660Hz -20 44 24 35 660Hz Continuous 800Hz 001010 44 35 21 24 800Hz IMO code 2 (High) 1200Hz 101010 22 44 24 35 1200Hz Continuous 011010 2000Hz -23 15 3 35 2000Hz Continuous 2400Hz 111010 24 48 20 35 2400Hz Continuous 440Hz 0.6s 440 @0.83Hz (50 000110 25 1 44 8 0.6s cycles/minute) Intermittent 470Hz 0.55s 470 @0.9Hz - 1.1s 100110 26 44 8 1 0.55s Intermittent 470Hz 0.1s 470Hz @5Hz - (5 010110 27 0.1s 1 44 8 cycles/second) Intermittent 470Hz 0.43s 544Hz @ 1.14Hz - 0.875s 110110 28 44 8 24 Intermittent 655Hz 0.57s 655Hz @ 0.875Hz 001110 29 8 Intermittent 660Hz [ 1.8s 660Hz @0.28Hz - 1.8sec on, 101110 30 44 24 8 1.8sec off Intermittent 660Hz 0.15s 660Hz @3.34Hz - 150mS on, 011110 31 30 8 24 150mS off Intermittent 0.15s

		745Hz 0.5s	111110			
32	745Hz @ 1Hz Intermittent	0.5s 800Hz 0.25s		44	24	8
33	800Hz - 0.25sec on, 1 sec off Intermittent	1s	000001	53	24	8
34	800Hz @ 2Hz IMO code 3.a (High) Intermittent	800Hz 0.25s 0.25s	100001	56	24	8
35	1000Hz @ 1Hz Intermittent	1000Hz 0.5s 0.5s	010001	44	24	8
36	2400Hz @ 1Hz Intermittent	2400Hz 0.5s 0.5s	110001	21	24	8
37	2900Hz @ 5Hz Intermittent	2900Hz 0.1s 0.1s	001001	53	24	8
38		518Hz 0.5s 0.5s	101001	1	8	19
39	363/518Hz @ 1Hz Alternating	500Hz 0.25s	011001	1	8	19
	450/500Hz @ 2Hz Alternating	554Hz 0.5s	111001			
40	554/440Hz @ 1Hz Alternating 554/440Hz @ 0.625Hz	554Hz 0.8s	000101	44	24	19
41	Alternating 561/760Hz @0.83Hz (50	440Hz 0.8s		1	8	19
42	cycles/minute) Alternating	780Hz 0.52s	100101	11	8	19
43	780/600Hz @ 0.96Hz Alternating	600Hz 0.52s	010101	1	8	19
44	800/1000Hz @ 2Hz Alternating	800Hz 0.25s	110101	5	24	19
45	970/800Hz @ 2Hz Alternating	970Hz 0.25s 800Hz 0.25s	001101	1	8	19
46	800/1000Hz @ 0.875Hz Alternating	1000Hz 800Hz 0.57s	101101	53	24	19
47	2400/2900Hz @ 2Hz Alternating	2900Hz 0.25s 2400Hz 0.25s	011101	57	24	19
48	500/1200Hz @ 0.3Hz Sweeping	1200Hz 500Hz 3.34s	111101	44	24	12
49	560/1055Hz @ 0.18Hz Sweeping	1055Hz 560Hz 5.47s	000011	44	24	12
50	560/1055Hz @ 3.3Hz	1055Hz	100011	44	24	12
51	Sweeping 600/1250Hz @ 0.125Hz	1250Hz	010011			12
	Sweeping 660/1200Hz @ 1Hz	600Hz 8s 1200Hz		44	24	
52	Sweeping	660Hz 1s 1000Hz	110011	64	24	12
53	800/1000Hz @ 1Hz Sweeping	800Hz 1s 1000Hz	001011	56	24	12
54	800/1000Hz @ 7Hz Sweeping	800Hz 0.14s	101011	57	24	12
55	800/1000Hz @ 50Hz Sweeping	800Hz 0.02s	011011	54	24	12
56	2400/2900Hz @ 7Hz Sweeping	2900Hz 2400Hz 0.14s	111011	57	24	12
57	2400/2900Hz @ 1Hz Sweeping	2900Hz 2400Hz 1s	000111	47	24	12
58	2400/2900Hz @ 50Hz Sweeping	2900Hz 2400Hz 0.02s	100111	54	24	12
59	2500/3000Hz @ 2Hz Sweeping	3000Hz 2500Hz 0.5s	010111	44	24	12
60	2500/3000Hz @ 7.7Hz Sweeping	3000Hz 2500Hz 0.13s	110111	44	24	12
61	800Hz Motor Siren	800Hz 0.138	001111	44	24	12
62		1200Hz	101111	44	24	12
	1200Hz Motor Siren	2s 2400Hz				
63	2400Hz Motor Siren	1.7s 1450Hz 0.25s	011111	44	24	12
64	Simulated Bell		111111	44	21	12

# FIRE INSTRUCTION MANUAL

# D2xC1 Alarm Horn and Strobe For use in Hazardous Locations



# 1) Introduction

The D2xC1X05DC024 & D2xC1X10DC024 are listed as Audible & Visual Appliances for use in Fire Alarm Systems Private Mode in accordance with UL464 Tenth Edition & UL1638 Fourth Edition.

#### 2) Warnings

DO NOT PAINT NE PAS PEINTURER

# 3) Fire Alarm Ratings

The following models are approved for use as Audible and Visual Appliance for use in Fire Alarm Systems – Private Mode (UL1638/UL464) and produce a sound pressure level above 75dB(A) at 10 feet:

D2xC1X05DC024 & D2xC1X10DC024

For Fire Alarm applications, the Sounder Volume must be at the highest setting, (see volume control section).

For fire alarm use, the temporal pattern tone No. 12 as per the tone table provided in these instructions must be selected. This tone produces a minimum sound pressure level of:

UL464: 92.2dB(A) $^{\dagger}$  at 10 feet. (†reverberation room)

#### On-Axis Flash Rate and min. light output:

Model	Flash Rate	Light output in cd eff.	Lens colour
D2vC1V0EDC024	60 fpm 15.6 4.8	15.6	Clear
D2xC1X05DC024		4.8	Red
D2xC1X10DC024	60 fpm	0 form 64.2 Clear	
D2XC1A10DC024	60 fpm	13.6	red

# 4) Sound Directional Characteristics for Fire Alarm


# **Horizontal Axis**

Angle	OSPL	Angle	OSPL
Reference	101.2dB(A)	Reference	101.2dB(A)
(90°)		(90°)	
115°	-3dB(A)	68°	-3 dB(A)
129°	-6dB(A)	55°	-6 dB(A)
180°	92.4dB(A)	0°	92.4

#### **Vertical Axis**

Angle	OSPL	Angle	OSPL
Reference	101.5dB(A)	Reference	101.5dB(A)
(90°)		(90°)	
123°	-3 dB(A)	65°	-3 dB(A)
137°	-6 dB(A)	50°	-6 dB(A)
180°	91 dB(A)	0°	88.5 dB(A)

European Safety Systems Ltd. Impress House, Mansell Road, Acton, London W3 7QH www.e2s.com Tel: +44 (0)208 743 8880 Document No. D189-00-501-IS-SC-UL Issue: A 27-07-22 Sheet 1 of 1

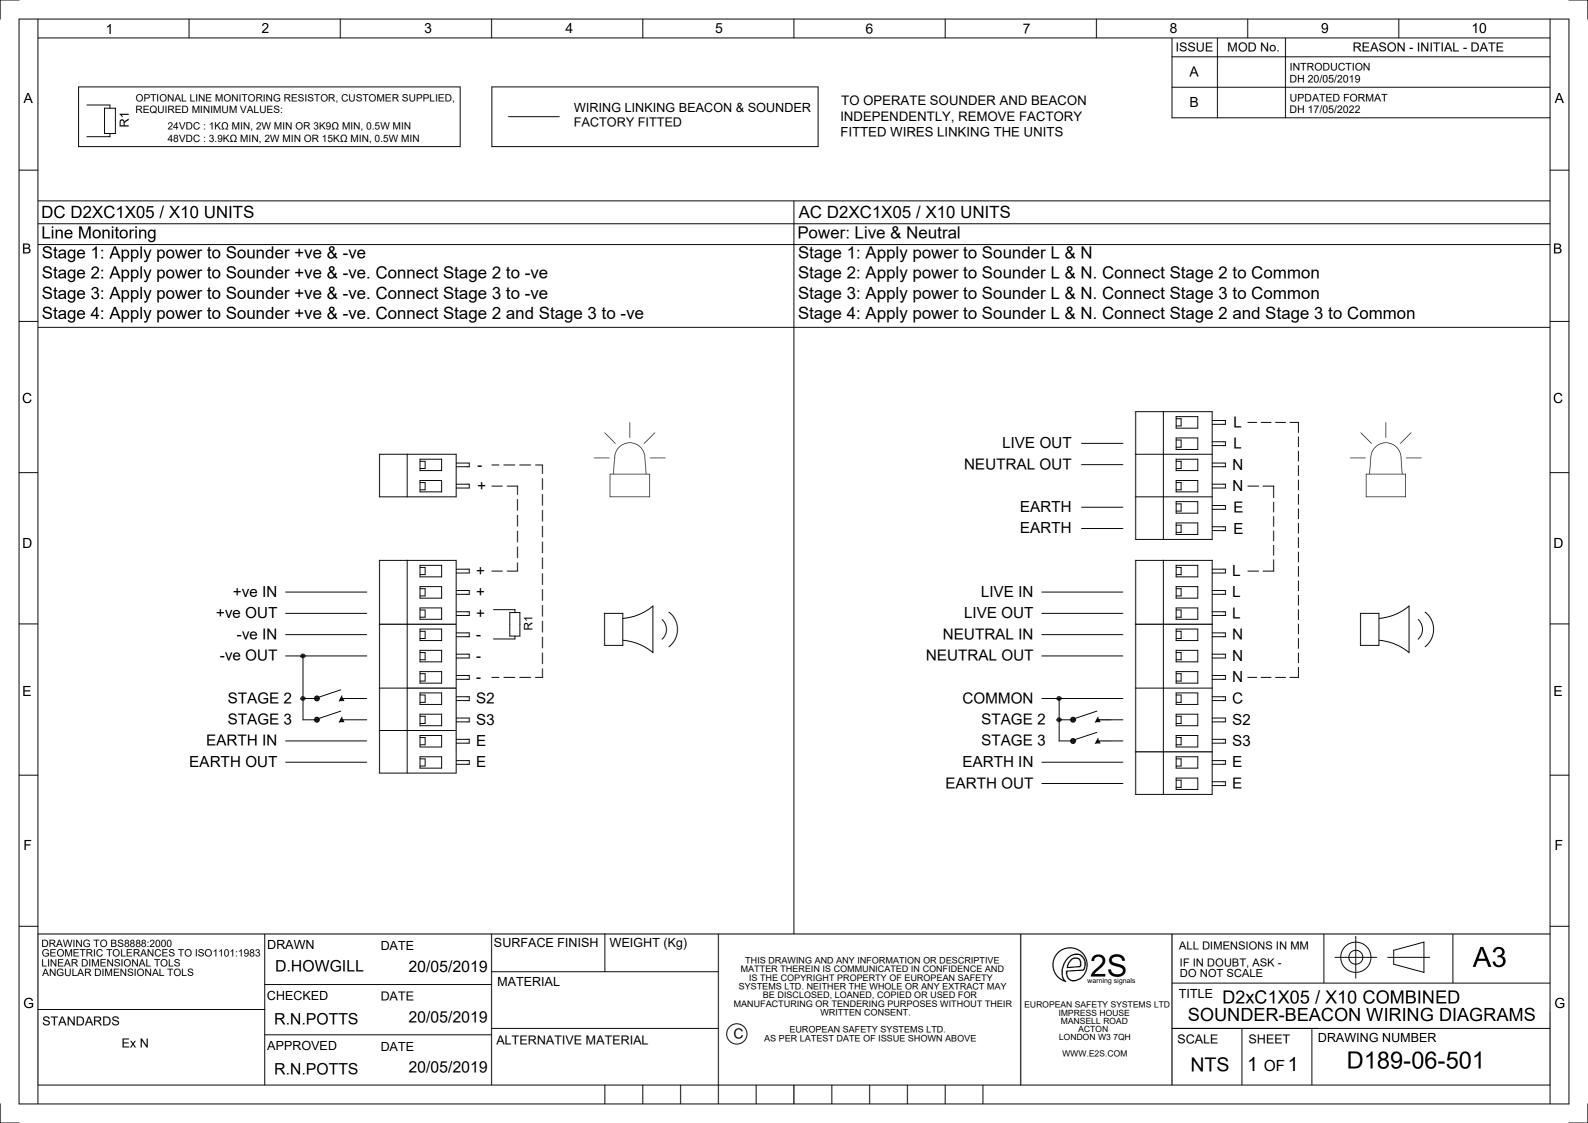

# **EU Declaration of Conformity**



Manufacturer: European Safety Systems Ltd.

Impress House, Mansell Road, Acton

London, W3 7QH United Kingdom

Authorised Representative: E2S Warnsignaltechnik UG

Charlottenstrasse 45-51

72764 Reutlingen

Germany

Equipment Type: D2xS1, D2xS2, D2xL1, D2xL2, D2xC1X05, D2xC1X10

D2xB1X05, D2xB1X10, D2xB1LD2, D2xB1XH1, D2xB1XH2, D2xB1LD3 D2xC2X05, D2xC2X10, D2xC2LD2, D2xC2XH1, D2xC2XH2, D2xC2LD3

D2xJ1

<u>Directive 2014/34/EU: Equipment and Protective Systems for use in Potentially Explosive Atmospheres (ATEX)</u>

Notified Body for EU type Examination (Module B): UL International Demko A/S

Notified Body No.: 0539

Borupvang 5A, 2750 Ballerup, Denmark

EU-type Examination Certificate (Module B): DEMKO 14 ATEX 4786493904X

Notified Body for Quality Assurance Notification / Conformity to EU-type

based on

Sira Certification Service Notified Body No.: 2813

quality assurance of the production process (Module D):

CSA Group Netherlands B.V, Utrechtseweg 310, 6812 AR, Arnhem, Netherlands

Quality Assurance Notification (Module D): SIRA 05 ATEX M342

Provisions fulfilled by the equipment: II 3G Ex ec IIC T6/T5/T4A/T4/T3C/T3/T2/T1 Gc

II 3D Ex tc IIIC T55/75/80/85/90/93/95/105/109/110/119°C Dc

Ingress / Dust Protection to EN60079-0 / EN60079-31:

IP66

Standards applied: EN IEC 60079-0:2018

EN IEC 60079-7:2015 +A1:2018

EN 60079-31:2014

Directive 2014/30/EU: Electromagnetic Compatibility Directive (EMC)

Standards applied: EN 61000-6-1:2007

EN 61000-6-2:2005

EN 61000-6-3:2007 / A1:2011 / AC: 2012

EN 61000-6-4:2007 / A1: 2011

Directive 2011/65/EU: Restriction of the use of certain hazardous substances in electrical and electronic equipment (ROHS)

The product and all the components contained within it are in accordance with the restriction of the use of hazardous substances in electrical and electronic equipment, including amendment by Directive 2015/863/EU.

# **EU Declaration of Conformity**



Regulation (EC) 1907/2006: Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH)

The product and all the components contained within it are free from substances of very high concern.

Other Standards and Regulations

EN 60529:1992+A2:2013 - Degrees of protection provided by enclosures (IP code) – enclosure rated:

IP66 All units

IP66/67 D2xL1, D2xL2, D2xS2 only

On behalf of European Safety Systems Ltd., I declare that, on the date the equipment accompanied by this declaration is placed on the market, the equipment conforms with all technical and regulatory requirements of the above listed directives, regulations and standards.

This Declaration is issued under the sole responsibility of the manufacturer.

Martin Streetz

Quality Assurance Manager

Document No.: DC-061\_Issue\_K
Date and Place of Issue: London, 04/12/2023



# UKCA Declaration of Conformity



Manufacturer: European Safety Systems Ltd.

Impress House, Mansell Road, Acton

London, W3 7QH United Kingdom

Equipment Type: D2xS1, D2xS2, D2xL1, D2xL2, D2xC1X05, D2xC1X10

D2xB1X05, D2xB1X10, D2xB1LD2, D2xB1XH1, D2xB1XH2, D2xB1LD3 D2xC2X05, D2xC2X10, D2xC2LD2, D2xC2XH1, D2xC2XH2, D2xC2LD3

D2xJ1

<u>Directive UKSI 2016:1107 (as amended by UKSI 2019:696) – Schedule 3A, Part 1: Product or Protective System Intended for use in Potentially Explosive Atmospheres (UKCA)</u>

Notified Body for UK type Examination (Module B): UL International (UK) Ltd

Notified Body No.: 0843

Unit 1-3 Horizon Kingsland Business Park, Wade Road,

Basingstoke, Hampshire RG24 8AH UK

UK-type Examination Certificate (Module B): UL21UKEX2131X

Notified Body for Quality Assurance Notification / Conformity to EU-type Sira Certification Service

based on

Notified Body No.: 0518

quality assurance of the production process (Module D):

Rake Lane, Eccleston, Chester CH4 9JN, UK

Quality Assurance Notification (Module D): CSAE 22UKQAN0046

Provisions fulfilled by the equipment: II 3G Ex ec IIC T6/T5/T4A/T4/T3C/T3/T2/T1 Gc

II 3D Ex tc IIIC T55/75/80/85/90/93/95/105/109/110/119°C Dc

Ingress / Dust Protection to EN60079-0 / EN60079-31:

IP66 All units

Standards applied: EN IEC 60079-0:2018

EN IEC 60079-7:2015 +A1:2018

EN 60079-31:2014

Directive 2014/30/EU: Electromagnetic Compatibility Directive (EMC)

Standards applied: EN 61000-6-1:2007

EN 61000-6-2:2005

EN 61000-6-3:2007 / A1:2011 / AC: 2012

EN 61000-6-4:2007 / A1: 2011

Directive 2011/65/EU: Restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS)

The product and all the components contained within it are in accordance with the restriction of the use of hazardous substances in electrical and electronic equipment, including amendment by Directive 2015/863/EU.



# UKCA Declaration of Conformity



Regulation (EC) 1907/2006: Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH)

The product and all the components contained within it are free from substances of very high concern.

Other Standards and Regulations

EN 60529:1992+A2:2013 - Degrees of protection provided by enclosures (IP code) – enclosure rated:

IP66 All units

IP66/67 D2xL1, D2xL2, D2xS2 only

On behalf of European Safety Systems Ltd., I declare that, on the date the equipment accompanied by this declaration is placed on the market, the equipment conforms with all technical and regulatory requirements of the above listed directives, regulations and standards.

This Declaration is issued under the sole responsibility of the manufacturer.

Martin Streetz **Quality Assurance Manager**  Document No.: Date and Place of Issue:

DC-102\_Issue\_B London, 04/12/2023

E2S Telephone: +44 (0)20 8743 8880 Fax: +44 (0)20 8740 4200 Email: sales@e2s.com www.e2s.com

DC-102\_Issue\_B - Page 2 of 2 - QAF\_252\_Issue\_5

