


# INSTRUCTION MANUAL

## D1xS2

### Alarm Horn Sounder

### Class II/III, Zone 20

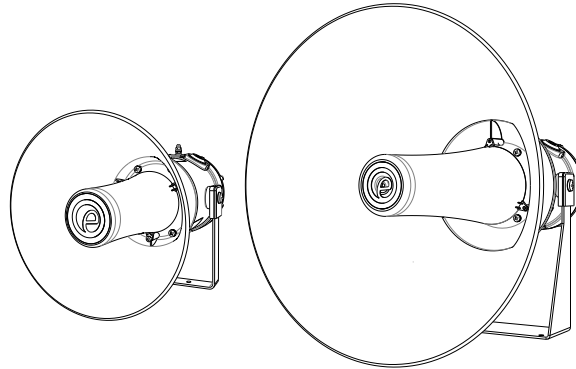

D1xS2F

D1xS2H

## 1) Product Table

Unit Type Code	Nominal Input Voltage	Nominal Current P2	Nominal Current P3	Voltage Range	Sound Pressure Level dB(A)	
					Max* P2/P3	Nom.† P2/P3
D1xS2FDC024-D	12Vdc	289mA	356mA	11.5-54Vdc	103/106	98/102
	24Vdc	324mA	740mA			
	48Vdc	195mA	391mA			
D1xS2FAC230-D	115Vac	125mA	282mA	100-240Vac 50/60Hz	106/109	103/105
	230Vac	78mA	167mA			
D1xS2HDC024-D	12Vdc	289mA	356mA	11.5-54Vdc	106/109	103/105
	24Vdc	324mA	740mA			
	48Vdc	195mA	391mA			
D1xS2HAC230-D	115Vac	125mA	282mA	100-240Vac 50/60Hz	106/109	103/105
	230Vac	78mA	167mA			

\*Max = Tone 4  
†Nom. = Tone 44

The table shows the input current taken by the various sounders.  
The current levels shown above are for the 440Hz Continuous tone @ nominal input voltage.  
Nominal current at nominal voltage.

Table 1: Electrical Ratings.

## 2) Warnings



### CAUTION

TO REDUCE THE RISK OF IGNITION OF HAZARDOUS ATMOSPHERES:

DISCONNECT FROM SUPPLY BEFORE OPENING.  
KEEP TIGHTLY CLOSED WHEN IN OPERATION.

### WARNING

FIT SEALING FITTING IN CONDUIT RUNS WITHIN 18 INCHES FROM ENCLOSURE.

EQUIPMENT MUST NOT BE INSTALLED WITH THE HORN FACING UPWARDS OF HORIZONTAL

DO NOT OPEN WHEN AN EXPLOSIVE ATMOSPHERE IS PRESENT

DO NOT OPEN WHEN ENERGISED

POTENTIAL ELECTROSTATIC CHARGING HAZARD - CLEAN ONLY WITH A DAMP CLOTH

ENCLOSURE ENTRIES: TWIN M20 X 1.5 / SINGLE 1/2" NPT

ATEX/IECEX INSTALLATIONS: IF TEMPERATURE EXCEEDS 70°C AT ENTRY OR 80°C AT BRANCHING POINT USE SUITABLE RATED CABLE AND GLANDS

### ATTENTION

POUR RÉDUIRE LE RISQUE D'INFLAMMATION DES ATMOSPHÈRES DANGEREUSES :

COUPER L'ALIMENTATION AVANT OUVERTURE.

CONSERVER FERMÉ PENDANT LE FONCTIONNEMENT.

### AVERTISSEMENT

CONDUITS DOIVENT ÊTRE SCELLES EN MOINS DE 18 POUCHES.

ÉQUIPEMENT NE DOIT PAS ÊTRE INSTALLÉ AVEC LE KLAXON TOURNÉ VERS LE HAUT DE HORIZONTAL.

NE PAS OUVRIR UN PRÉSENCE D'ATMOSPHÈRE EXPLOSIVE

NE PAS OUVRIR ÉNERGIE

DANGER POTENTIEL CHARGE ÉLECTROSTATIQUE - NETTOYER UNIQUEMENT AVEC UN CHIFFON HUMIDE

ENTRÉES DE BOÎTIER: 2 x M20 X 1.5 / 1 x 1/2" NPT

ATEX/IECEX INSTALLATIONS : SI LA TEMPÉRATURE DÉPASSE 70 °C À L'ENTRÉE OU 80 °C AU POINT DE BRANCHEMENT,

UTILISER UN CÂBLE ET DES JOINTS D'ÉTANCHÉITÉ APPROPRIÉS

### 3) Marking & Rating Information

The D1xS2 Alarm Horns comply with the following standards for hazardous locations:

#### 3.1 Class/Division Ratings for US & Canada

Standards	
Class I UL 1203 & CSA C22.2 No 25-1966	
Class Division Ratings for US (NEC)	
Model No:	Rating
D1xS2-DC024-D / D1xS2-AC230-D	Class II Div 1 FG T6 Ta -55°C to +70°C Class III Div 1 Ta -55°C to +70°C
Class Division Ratings for Canada (CEC)	
Model No:	Rating
D1xS2-DC024-D	Class II Div 1 FG T6 Ta -55°C to +70°C Class III Div 1 Ta -55°C to +70°C
D1xS2-AC230-D	Class II Div 1 FG T6 Ta -55°C to +40°C Class III Div 1 Ta -55°C to +40°C
Class Zone Ratings for US (NEC)	
Model No:	Rating
D1xS2-DC024-D / D1xS2-AC230-D	Class II Zone 20 IIIB T6 Ta -55°C to +70°C
Class Zone Ratings for Canada (CEC)	
Model No:	Rating
D1xS2-DC024-D	Class II Zone 20 IIIB T6 Ta -55°C to +70°C
D1xS2-AC230-D	Class II Zone 20 IIIB T6 Ta -55°C to +40°C
Ambient Temperature Range	
-55°C to +70°C (-67°F to +158°F)	
IP Rating	
IP66 to EN60529 4 / 4X / 3R / 13 to UL50E / NEMA250	

### 4) Special Conditions for Safe Use

To access the Ex d chamber, loosen the M4 grub screw on the sounder cover. Open the enclosure by turning the sounder cover counterclockwise and remove the cover.

Electrical connections are to be made into the terminal blocks on the PCBA, using solid wire 0.5-4mm<sup>2</sup> / AWG 20-12 or stranded wire, sizes 0.5-2.5mm<sup>2</sup> / AWG 24-14. Wire insulation needs to be stripped 8mm. Wires may be fitted securely with crimped ferrules. Terminal screws need to be tightened down with a tightening torque of 0.45 Nm / 3.5 Lb-in.

Internal earthing connections should be made to the Internal Earth terminal in the base of the housing using a ring crimp terminal to secure the earth conductor under the earth clamp. The earth conductor should be at least equal in size and rating to the incoming power conductors but at least a minimum of 0.82mm<sup>2</sup> / 18AWG in size.

External earthing connections should be made to the M5 earth stud, using a ring crimp terminal to secure the earth conductor to the earth stud. The external earth conductor should be at least 4mm<sup>2</sup> in size.

On completion of the installation the flameproof threaded joint should be inspected to ensure that they are clean and that they have not been damaged during installation.

Ensure the O-ring seal is in place and undamaged.

When fitting the flameproof cover ensure the thread is engaged correctly. Fully tighten the cover all the way, ensure no gap is visible between the cover and base of the sounder enclosure.

The cable entries have two M20 x 1.5 – 6H entry thread and a single ½" NPT thread. If the installation is made using cable glands, only suitably rated and certified cable glands must be used. They must be suitable for the type of cable being used and also meet the requirements of the current installation standards EN 60079-14 / IEC60079-14.


If the installation is made using conduit, openings must have a sealing fitting connected within 18" of enclosure.

Any unused cable entries must be closed with suitably rated and certified blanking plugs.

The plastic horn is not anti-static and the metallic enclosure has a non-conductive coating. These may generate an ignition-capable level of electrostatic charges under certain extreme conditions. The user should ensure that the equipment is not installed in a location where it may be subjected to external conditions that might cause a build-up of electrostatic charges on non-conducting surfaces.

Repair of the flameproof threaded joints and cemented joints is not permitted.

The Equipment must not be installed with the horn facing upwards of horizontal.

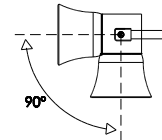

Only the explosionproof cover is to be used for access to the enclosure for installation, service and maintenance.

## 5) Product Mounting and Access

### 5.1 Mounting

The D1x Alarm Horn may be secured to any flat surface using at least two of the three or four 7mm fixing holes. The enclosure provides IP66 protection and is suitable for installation in exterior locations providing it is positioned so that water cannot collect in the horn, and the cable entry is sealed.

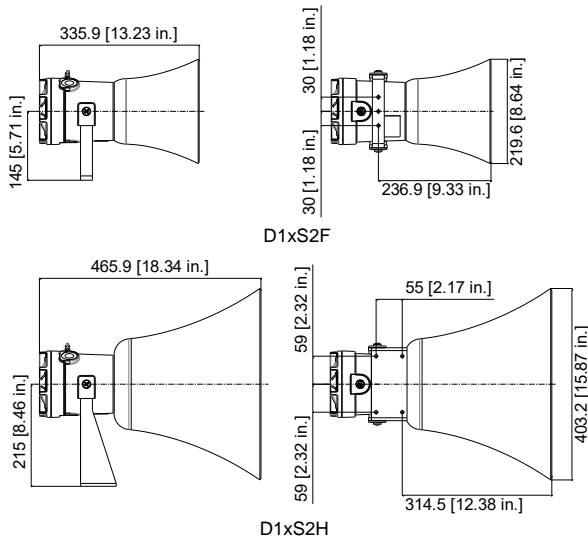


Fig 1: Mounting Locations

### 5.2 Installation procedure

- Secure the D1x unit to a flat surface via the three 7mm fixing holes in the mounting bracket.
- Remove the explosionproof cover of the alarm horn by unscrewing it, taking care not to damage the explosionproof threads in the process (Refer to section 5).
- Fit an M20/NPT suitably rated cable gland or conduit entry into the hole in the enclosure and connect the field wiring to the appropriate alarm horn terminals as shown in fig. 6 (AC) or fig 8. (DC). The power supply terminals are duplicated so that units may be connected in parallel. An end of line monitoring resistor may be fitted to DC units only (see section 12). If the second and third M20/NPT entries are not used, suitably rated stopping plugs must always be fitted.
- Replace the explosionproof cover of the loudspeaker, taking care not to damage the explosionproof threads. Tighten fully.

### 5.3 Hornless Variants

The D1x Sounder is also available as a variant with no horn fitted in the factory. The Horn threaded nose portion has a fitment thread of 1-3/8" – 18 UNF (to BS1580 or ANSI B1.1). The customer is responsible for sourcing and correctly fitting a suitable horn that meets all of the relevant safety requirements.

### 6.4 Access to the Explosionproof Enclosure

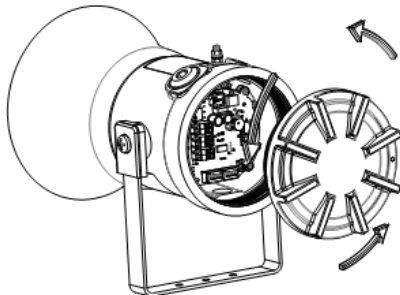


Fig 2: Accessing the enclosure

To access the Ex d chamber, loosen the M4 grub screw on the sounder cover. Open the enclosure by turning the sounder cover counterclockwise and remove the cover. Take extreme care not to damage the explosionproof threads in the process.

## 6) Installation Requirements

### 6.1 Safe Installation Requirements



Warning – High voltage may be present, risk of electric shock.  
DO NOT open when energised, disconnect power before opening.


The sounder must only be installed by suitably qualified personnel in accordance with the latest issues of the relevant standards.

The product must only be installed by suitably qualified personnel in accordance with the latest issues of the relevant standards.

The installation of the units must also be in accordance with the NEC / CEC and any local regulations and should only be carried out by a competent electrical engineer who has the necessary training.

### 6.2 Cable Selection and Connections

When selecting the cable size, consideration must be given to the input current that each unit draws (see table 1), the number of sounders on the line and the length of the cable runs. The cable size selected must have the necessary capacity to provide the input current to all the sounders connected to the line.




AC: 1.0 - 2.5mm<sup>2</sup> / AWG18 - AWG12  
DC: 0.2 - 2.5mm<sup>2</sup> / AWG24 - AWG12

Figure 3: Wire Preparation.

When connecting wires to the terminals great care should be taken to dress the wires so that when the cover is inserted into the chamber the wires do not exert excess pressure on the terminal blocks. This is particularly important when using cables with large cross-sectional areas such as 2.5mm<sup>2</sup>.

### 6.3 Earthing

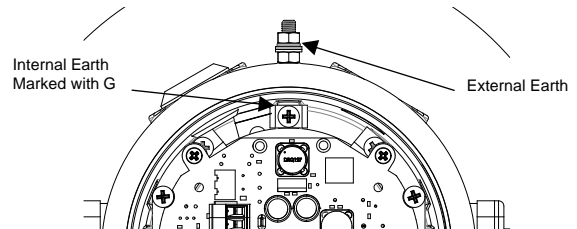

The unit has both a primary internal and secondary external earth fixing point.

Internal earth connections should be made to the internal Earth terminal in the base of the housing using a ring crimp terminal to secure the earth conductor under the earth clamp.

External earth connections can be made to the M5 earth stud (see Fig. 2), using a ring crimp terminal to secure the earth conductor to the earth stud. The external earth conductor should be at least 4mm<sup>2</sup> in size.

The external earth crimp ring should be located between the two M5 plain washers provided and securely locked down with the M5 spring washer and M5 nut.

The earth conductor should be at least equal in size and rating to the incoming power conductors but at least a minimum of 0.82mm<sup>2</sup> / 18AWG in size.

## 6.4 Cable Glands, Blanking Elements & Adapters

### Ingress Protection

If a high IP (Ingress Protection) rating is required then a suitable sealing washer must be fitted under the cable glands or blanking plugs. A minimum ingress protection rating of IP6X must be maintained for installations in explosive dust atmospheres.

To maintain the ingress protection rating and mode of protection, the cable entries must be fitted with suitably rated cable entry and/or blanking devices during installation.

If entries are fitted with adaptors they must be suitably rated for the application. Fitting of blanking elements into adaptors is not permitted.

### Adapters

The GNEEx sounder range can be supplied with the following types of adapters:

- M20 to 1/2" NPT
- M20 to 3/4" NPT
- M20 to M25

It is important to note that stopping plugs cannot be fitted onto adapters, only directly onto the M20 entries.

Any other adapters used must be suitably rated and certified.

If the installation is made using conduit, openings must have a sealing fitting connected as close as practical to the wall of the enclosure, but in no case more than the size of the conduit or 50mm, whichever is the lesser.

## 7) Settings

Following illustrations show the settings available for D1xS2 Alarm Horn Sounders. See schematic diagram D190-06-001 for details.

### 7.1 SPL Configuration

See Table 1 for product power supply and Sound Pressure Levels (SPL).

### Configuration for DC Units

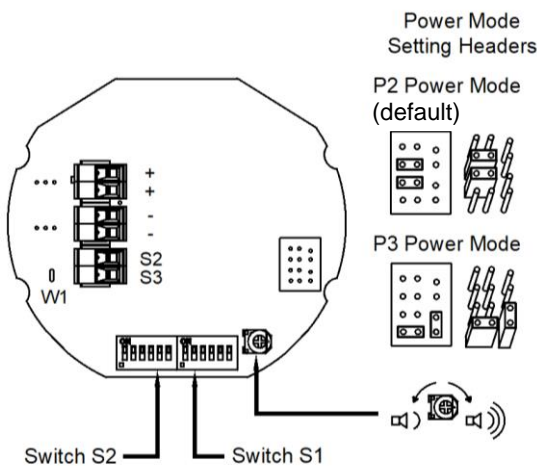


Figure 4: DC PCBA.

### Configuration for AC Units

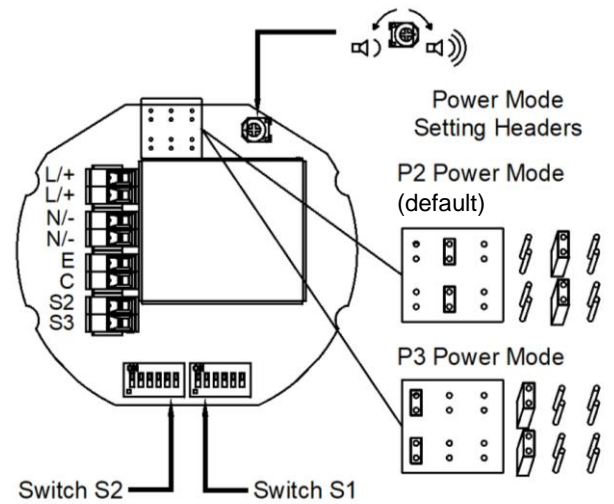


Figure 5: AC PCBA .

### 7.2 Stage Switching Polarity (DC Units)

Switching from positive switching (default) to negative switching - DC Only.

**NOTE:** Max supply is 33V DC – if higher DC voltage is required, use Negative switching.

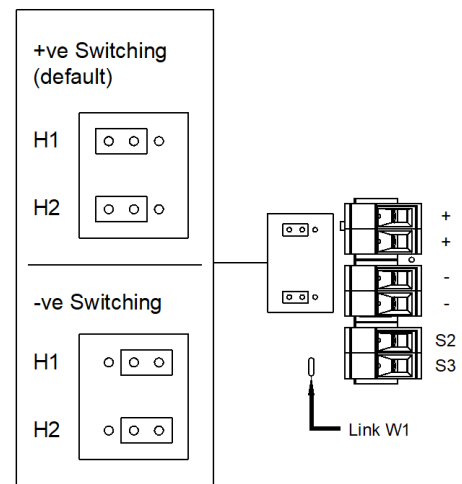



Figure 6: Stage Switching Polarity.

### 7.3 Tone Selection

The D1x Alarm Horn Sounders have 64 different tones that can be selected independently for the first and second stage alarms. The tones are selected by operation of the tone setting DIP switch 1 & DIP 2 (see figures 6 and 7) on the PCB, for stage 1 and stage 2 respectively.

Default = Switch 2  
S2 - Tone 1  
0 0 0 0 0 0

Default = Switch 1  
S1 - Tone 44  
1 1 0 1 0 1

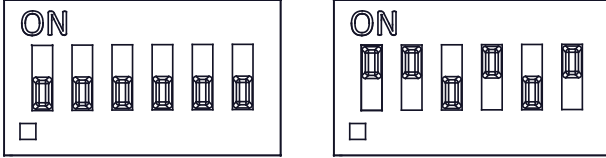

(ON = 1, OFF = 0)

Figure 7: DIP switch configuration

The sounder can also be switched to sound the third and fourth stage alarm tones.

The tone table (D221-95-001-IS) shows the switch positions for the 64 tones on first and second stages and which tones are available for the third and fourth stages dependent on the Stage 1 DIP switch setting.

Following table (Table 3) is a summary of DC: D190-06-001; AC: D190-06-005 wiring options.

Config.	Voltage	Configuration Description	Features	Product Option Identifier
1a	DC	Single Stage Configuration	<ul style="list-style-type: none"> <li>Line monitoring</li> <li>Positive Switching</li> </ul>	1
1b	DC	Two Stage Configuration	<ul style="list-style-type: none"> <li>Common Negative</li> <li>Positive Switching</li> </ul>	1
1c	DC	Three/Four Stage Configuration	<ul style="list-style-type: none"> <li>Common Negative</li> <li>Positive Switching</li> </ul>	1
2	DC	Three/Four Stages. Voltage Free 2nd, 3rd & 4th Stage Activation Configuration	<ul style="list-style-type: none"> <li>Common Positive</li> <li>Customer Set H1 &amp; H2 to Negative Switching</li> </ul>	1
3	DC	Two Stage Configuration	<ul style="list-style-type: none"> <li>Independent Stage Input</li> <li>Reverse Polarity Stage Monitoring</li> </ul>	1
4	DC	Two Stage Configuration	<ul style="list-style-type: none"> <li>Line Stage Monitoring (Use suitable monitoring relays/ modules)</li> <li>Not to be used in reverse polarity monitoring</li> </ul>	Y
5	DC	Two/Three Stage Voltage Free Activation Configuration		K
6	DC	Three/Four Stage Configuration	<ul style="list-style-type: none"> <li>Independent Stage Input</li> <li>Line Stage Monitoring (Use suitable monitoring relays/ modules)</li> <li>Positive Switching (Default)</li> </ul>	V
1a	AC	Single Stage Configuration		1
1b	AC	Three/Four Stage Configuration		1
2	AC	Two/Three Stage Voltage Free Activation Configuration		K

Table 3: Summary of Wiring Options. See Document D190-06-001 for DC Schematic Diagrams; D190-06-005 for AC Schematic Diagrams.

## 8) End of Line Monitoring (DC Units)

### 8.1 Standard DC End Of Line Monitoring

All DC units have a blocking diode fitted in their supply input lines. An end of line monitoring diode or an end of line monitoring resistor can be connected across the +ve and -ve terminals in the flameproof chamber. If an end of line resistor is used it must have a minimum resistance value of 3k3 ohms and a minimum wattage of 0.5W or a minimum resistance value of 500 ohms and a minimum wattage of 2W.

The resistor must be connected directly across the +ve and -ve terminals as shown in the following drawing. The resistor leads should be kept as short as possible. See D190-06-001 for details.


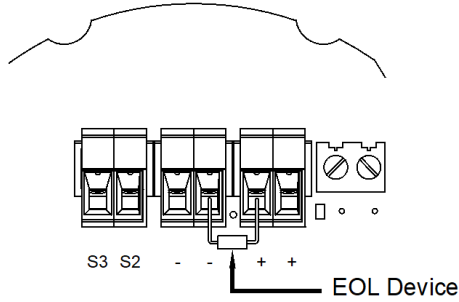


Figure 8: End of Line Resistor placement.

### 8.2 Custom DC Multi-Stage End Of Line Monitoring

An optional 12-way terminal module is available to enable up to four alarm stages to be activated from three DC voltage output channels. The three alarm stage activation inputs can be independently monitored.

Refer to Schematic D190-06-001, Config. 6.  
Specify Product option 'V' when ordering.  
Spare part code for field installation: SP78-0001

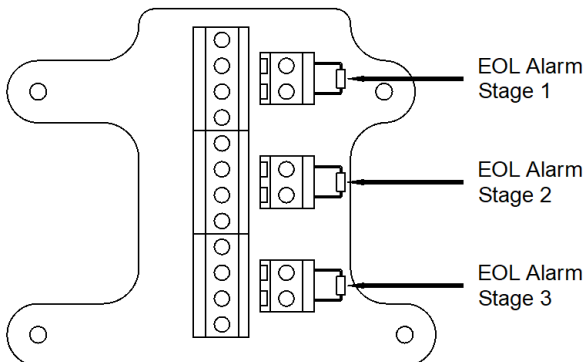

## 9) Maintenance, Overhaul and Repair

Figure 9: End of Line Resistor placement –  
Optional 12-Way Terminal Module.

Maintenance, repair and overhaul of the equipment should only be carried out by suitably qualified personnel in accordance with the current relevant standards:

Flameproof threaded joints and cemented joints are not permitted to be repaired.

Units must not be opened while an explosive atmosphere is present.

If opening the unit during maintenance operations, a clean environment must be maintained and any dust layer removed prior to opening the unit.

Potential electrostatic charging hazard – Clean only with a damp cloth.



· All models are approved for use as Audible Signal Appliance for use as General Signaling: UL464A & CSA C22.2 No 205-17

· Type 4 / 4X / 3R / 13, IP66

· -55°C to +85°C / -67°C to +176°F

General Signaling Canada:

D1xS2-AC230-A: -55°C to +40°C / -67°F to +104°F

D1xS2-DC024-A, D1xS2-DC024-S: -55°C to +85°C / -67°F to +185°F

· To maintain Ingress Protection, cable entries must be fitted with suitably rated cable glands or stopping plugs

· EOL Monitoring (DC Only): End of Line Devices may be fitted between the +ve & -ve terminals of the PCBA. Please ensure that the device legs meet the wire size range stated for the connection terminals and are fitted correctly in order to avoid a short. Refer to the compatible control panel specification for EOL device values and ratings

Model	Nominal Voltage	Voltage Range	P1 Nominal Operating Current <sup>#</sup>	P2 Nominal Operating Current <sup>#</sup>	P3 Nominal Operating Current <sup>#</sup>	P1 Max Operating RMS <sup>*</sup>	P2 Max Operating RMS <sup>*</sup>	P3 Max Operating RMS <sup>*</sup>
D1xS2-DC024-A	12V dc	11.5 - 54V dc	-	289mA	359mA	-	324mA	740mA
	24V dc		-	324mA	740mA			
	48V dc		-	195mA	391mA			
D1xS2-AC230-A	115V ac	100- 240V ac 50/60Hz	-	125mA	282mA	-	138mA	325mA
	230V ac		-	78mA	167mA			

\*Max Operating current for worst-case input voltage; Nominal current at nominal voltage and Tone 12


Table 4: UL General Signaling Electrical ratings

Stage 1 Set DIP SW 1 Tone No.	Tone Description	Tone Visual	Stage 1 & 2 DIP SW 1/2 Settings 1 2 3 4 5 6	Stage 3 Set DIP SW 1 (S3)	Stage 4 Set DIP SW 1 (S2 + S3)
1	1000Hz PFEER Toxic Gas		0 0 0 0 0 0	2	44
2	1200/500Hz @ 1Hz DIN /PFEER P.T.A.P.		1 0 0 0 0 0	3	44
3	1000Hz @ 0.5Hz(1s on, 1s off) PFEER Gen. Alarm		0 1 0 0 0 0	2	44
4	1.4KHz-1.6KHz 1s, 1.6KHz-1.4KHz 0.5s NF C 48-265		1 1 0 0 0 0	24	1
5	544Hz(100mS)/440Hz (400mS) NF S 32-001		0 0 1 0 0 0	19	1
6	1500/500Hz - (0.5s on, 0.5s off) x3 + 1s gap AS4428		1 0 1 0 0 0	44	1
7	500-1500Hz Sweeping 2 sec on 1 sec off AS4428		0 1 1 0 0 0	44	1
8	500/1200Hz @ 0.26Hz (3.3son, 0.5s off) Netherlands - NEN 2575		1 1 1 0 0 0	24	35
9	1000Hz (1s on, 1s off)x7 + (7s on, 1s off) IMO Code 1a		0 0 0 1 0 0	34	1
10	1000Hz (1s on, 1s off)x7 + (7s on, 1s off) IMO Code 1a		1 0 0 1 0 0	34	1
11	420Hz(0.5s on, 0.5s off)x3 + 1s gap ISO 8201 Temporal Pattern		0 1 0 1 0 0	1	8
12	1000Hz(0.5s on, 0.5s off)x3 + 1s gap ISO 8201 Temporal Pattern		1 1 0 1 0 0	1	8
13	422/775Hz - (0.85 on, 0.5 off) x3 + 1s gap NFPA - Temporal Coded		0 0 1 1 0 0	1	8
14	1000/2000Hz @ 1Hz Singapore		1 0 1 1 0 0	3	35
15	300Hz Continuous (f=300)		0 1 1 1 0 0	24	1
16	440Hz Continuous (f=440)		1 1 1 1 0 0	24	1
17	470Hz Continuous (f=470)		0 0 0 0 1 0	24	8
18	500Hz Continuous IMO code 2 (Low) (f=500)		1 0 0 0 1 0	24	8
19	554Hz Continuous (f=554)		0 1 0 0 1 0	24	8
20	660Hz Continuous (f=660)		1 1 0 0 1 0	24	35
21	800Hz IMO code 2 (High) (f=800)		0 1 0 1 0 0	24	35
22	1200Hz Continuous (f=1200)		1 0 1 0 1 0	24	35
23	2000Hz Continuous (f=2000)		0 1 1 0 1 0	3	35
24	2400Hz Continuous (f=2400)		1 1 1 0 1 0	20	35
25	440Hz @0.83Hz (50 cycles/minute) Intermittent (f=440, a=0.6, b=0.6)		0 0 0 1 1 0	44	8
26	470Hz @0.9Hz - 1.1s Intermittent (f=470, a=0.55, b=0.55)		1 0 0 1 1 0	44	8
27	470Hz @5Hz - (5 cycles/second) Intermittent (f=470, a=0.1, b=0.1)		0 1 0 1 1 0	44	8
28	544Hz @ 1.14Hz - 0.875s Intermittent (f=470, a=0.43, b=0.44)		1 1 0 1 1 0	24	8
29	655Hz @ 0.875Hz Intermittent (f=655, a=0.57, b=0.57)		0 0 1 1 1 0	24	8
30	660Hz @0.28Hz - 1.8sec on, 1.8sec off Intermittent (f=660, a=1.8, b=1.8)		1 0 1 1 1 0	24	8
31	660Hz @3.34Hz - 150mS on, 150mS off Intermittent (f=660, a=0.15, b=0.15)		0 1 1 1 1 0	24	8
32	745Hz @ 1Hz Intermittent (f=745, a=0.5, b=0.5)		1 1 1 1 1 0	24	8
33	800Hz - 0.25sec on, 1 sec off Intermittent (f=800, a=0.25, b=1)		0 0 0 0 0 1	24	8
34	800Hz @ 2Hz IMO code 3.a (High) Intermittent (f=800, a=0.25, b=0.25)		1 0 0 0 0 1	24	19
35	1000Hz @ 1Hz Intermittent (f=1000, a=0.5, b=0.5)		0 1 0 0 0 1	24	19
36	2400Hz @ 1Hz Intermittent (f=2400, a=0.5, b=0.5)		1 1 0 0 0 1	24	19
37	2900Hz @ 5Hz Intermittent (f=2900, a=0.1, b=0.1)		0 0 1 0 0 1	24	19
38	363/518Hz @ 1Hz Alternating (f=363, f1=518, a=0.1)		1 0 1 0 0 1	8	19
39	450/500Hz @ 2Hz Alternating (f=450, f1=500, a=0.25)		0 1 1 0 0 1	8	19
40	554/440Hz @ 1Hz Alternating (f=440, f1=554, a=0.5)		1 1 1 0 0 1	24	19
41	554/440Hz @ 0.625Hz Alternating (f=440, f1=554, a=0.8)		0 0 0 1 0 1	8	19
42	561/760Hz @0.83Hz (50 cycles/minute) Alternating (f=561, f1=760, a=0.6)		1 0 0 1 0 1	8	19
43	780/600Hz @ 0.96Hz Alternating (f=600, f1=780, a=0.52)		0 1 0 1 0 1	8	19
44	800/1000Hz @ 2Hz Alternating (f=800, f1=1000, a=0.25)		1 1 0 1 0 1	24	19
45	970/800Hz @ 2Hz Alternating (f=800, f1=970, a=0.25)		0 0 1 1 0 1	8	19
46	800/1000Hz @ 0.875Hz Alternating (f=800, f1=1000, a=0.57)		1 0 1 1 0 1	24	19
47	2400/2900Hz @ 2Hz Alternating (f=2400, f1=2900, a=0.25)		0 1 1 1 0 1	24	19
48	500/1200Hz @ 0.3Hz Sweeping (f=500, f1=1200, a=3.34)		1 1 1 1 0 1	24	12
49	560/1055Hz @ 0.18Hz Sweeping (f=560, f1=1055, a=5.47)		0 0 0 0 1 1	24	12
50	560/1055Hz @ 3.3Hz Sweeping (f=560, f1=1055, a=0.3)		1 0 0 0 1 1	24	12
51	600/1250Hz @ 0.125Hz Sweeping (f=600, f1=1250, a=8)		0 1 0 0 1 1	24	12
52	660/1200Hz @ 1Hz Sweeping (f=660, f1=1200, a=1)		1 1 0 0 1 1	24	12
53	800/1000Hz @ 1Hz Sweeping (f=800, f1=1000, a=1)		0 1 0 0 1 1	24	12
54	800/1000Hz @ 7Hz Sweeping (f=800, f1=1000, a=0.14)		1 0 1 0 1 1	24	12
55	800/1000Hz @ 50Hz Sweeping (f=800, f1=1000, a=0.02)		0 1 0 1 0 1	24	12
56	2400/2900Hz @ 7Hz Sweeping (f=2400, f1=2900, a=0.14)		1 1 1 0 1 1	24	12
57	2400/2900Hz @ 1Hz Sweeping (f=2400, f1=2900, a=1)		0 0 0 1 1 1	24	12
58	2400/2900Hz @ 50Hz Sweeping (f=2400, f1=2900, a=0.02)		1 0 0 1 1 1	24	12
59	2500/3000Hz @ 2Hz Sweeping (f=2500, f1=3000, a=0.5)		0 1 0 1 1 1	24	12
60	2500/3000Hz @ 7.7Hz Sweeping (f=2500, f1=3000, a=0.13)		1 1 0 1 1 1	24	12
61	800Hz Motor Siren (f=800, a=1.6)		0 0 1 1 1 1	24	12
62	1200Hz Motor Siren (f=1200, a=2)		1 0 1 1 1 1	24	12
63	2400Hz Motor Siren (f=2400, a=1.7)		0 1 1 1 1 1	24	12
64	Simulated Bell		1 1 1 1 1 1	21	12




1	2	3	4	5	6	7	8	9	10
OPTIONAL LINE MONITORING RESISTOR, CUSTOMER SUPPLIED. RECOMMENDED MINIMUM VALUES: 100 WATT SYSTEM = 470Ω MIN OR 1KΩ MIN, 0.5W MIN 200 WATT SYSTEM = 470Ω MIN, 2W MIN OR 2.4KΩ MIN, 0.5W MIN 28V MAX SYSTEM = 470Ω MIN, 2W MIN OR 2.4KΩ MIN, 0.5W MIN									
ISSUE / MOD NO: 1 / INTRODUCTION / RSR - 19/01/2022									
REASON - INITIAL - DATE									

<b>Single Stage Configuration</b> <b>Line Monitoring</b> Set to positive switching (default) Stage 1: Apply Power to Stage 1 +ve & Stage 1 -ve	<b>Two Stage Configuration</b> <b>Common Negative</b> Set to positive switching (default) Stage 1: Apply Power to Stage 1 +ve & Common -ve Stage 2: Apply Power to Stage 2 +ve & Common -ve	<b>Three/Four Stage Configuration</b> <b>Common Negative</b> Set to positive switching (default) Stage 1: Apply Power to Stage 1 +ve & Common -ve Stage 2: Apply Power to Stage 2 +ve & Common -ve Stage 3: Apply Power to Stage 3 +ve & Common -ve Stage 4: Apply Power to Stage 2 +ve, Stage 3 +ve & Common -ve
---	---	---

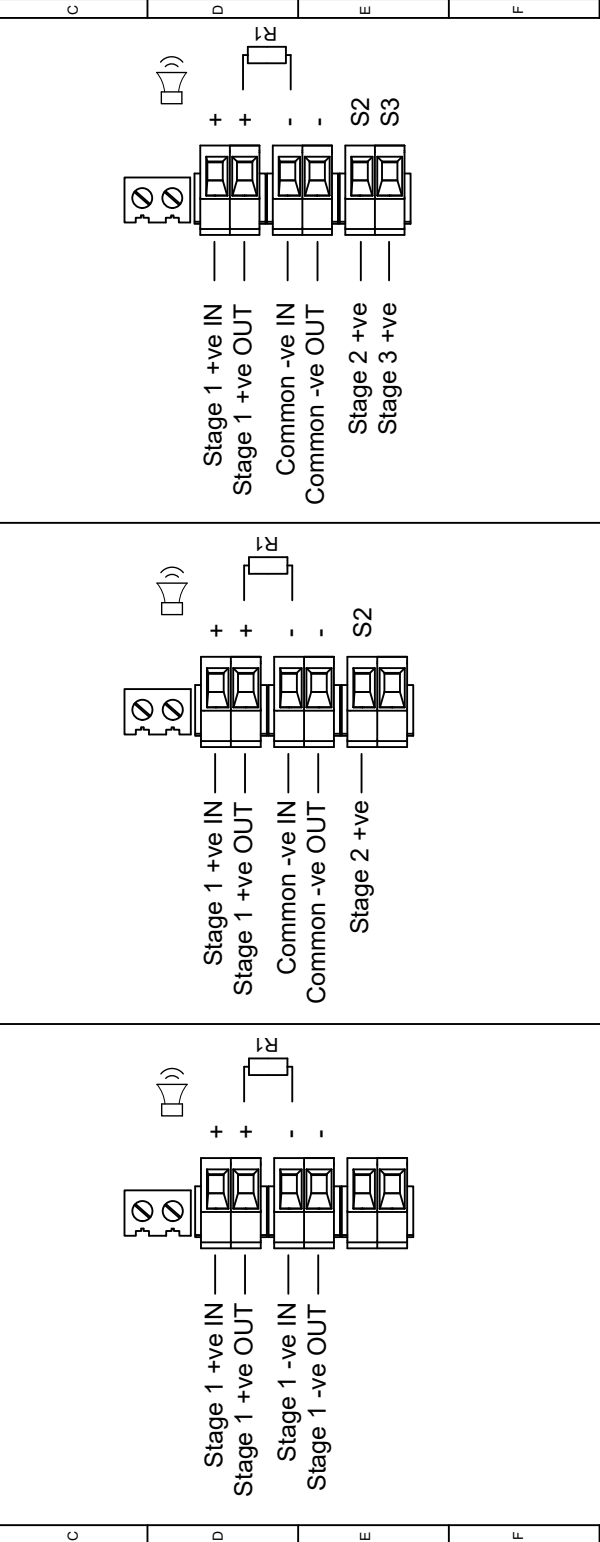

DRAWING TO BS8888:2000. GEOMETRIC TOLERANCES TO ISO1101:1983 ANGULAR DIMENSIONAL TOLS	DRAWN R.S. RAIT	DATE 19/01/2022	SURFACE FINISH MATERIAL	ALL DIMENSIONS IN MM IF IN DOUBT, ASK - DO NOT SCALE		A3
	CHECKED B. JISARD	DATE 19/01/2022	ALTERNATIVE MATERIAL	TITLE STXS2 DC SOUNDER WIRING DIAGRAMS	SCALE NTS 1 OF 3	SHEET DRAWING NUMBER D190-06-001
STANDARDS Dtx	APPROVED R.N.POTTS	DATE 19/01/2022	THIS DRAWING AND ANY INFORMATION OR DESCRIPTIVE MATTER THEREIN IS COMMUNICATED IN CONFIDENCE AND IS NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEMS LTD. NEITHER THE WHOLE OR ANY PART THEREOF MAY BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS WITHOUT THEIR WRITTEN CONSENT. © AS PER LATEST DATE OF ISSUE SHOWN ABOVE	EUROPEAN SAFETY SYSTEMS LTD WINDYBROOK MANSELL ROAD LONDON W3 7QH WWW.ESS.COM	STXS2 DC SOUNDER WIRING DIAGRAMS	H

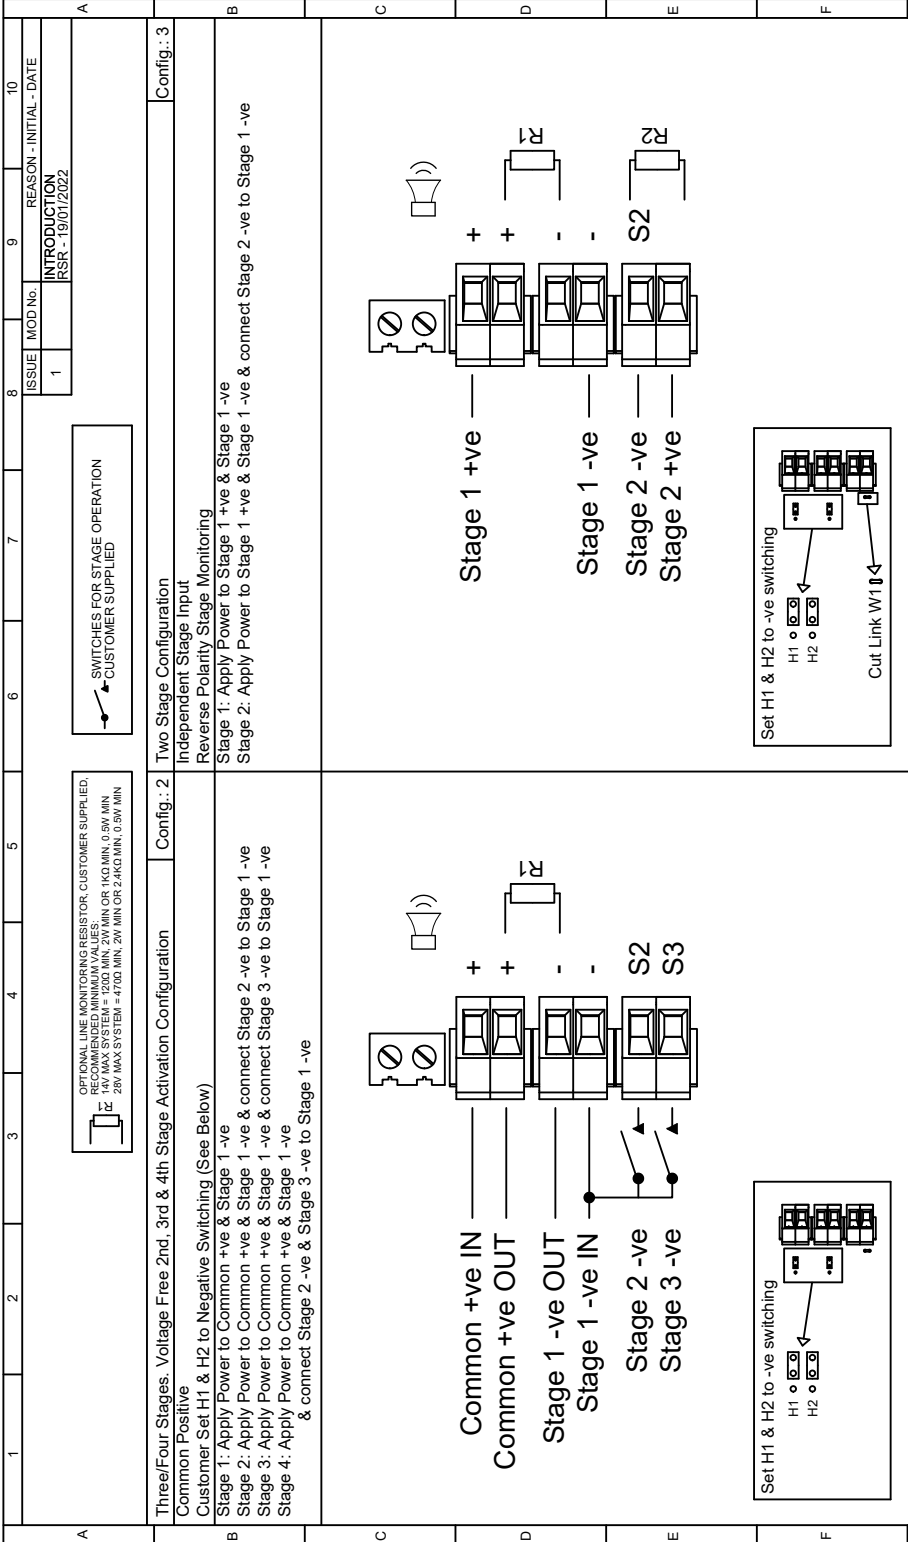

1	2	3	4	5	6	7	8	9	10
ISSUE		MOD.No.		REASON - INITIAL - DATE		INTRODUCTION		RSR - 19/01/2022	
1									
<p><b>SWITCHES FOR STAGE OPERATION</b></p> <p>← CUSTOMER SUPPLIED</p>									
<p><b>OPTIONAL LINE MONITORING RESISTOR, CUSTOMER SUPPLIED, RECOMMENDED:</b></p> <p>14V MAX SYSTEM = 120Ω MIN, 2W MIN OR 1KΩ MIN, 0.5W MIN</p> <p>28V MAX SYSTEM = 470Ω MIN, 2W MIN OR 2.4KΩ MIN, 0.5W MIN</p>					<p><b>Config: 2</b></p> <p>Three/Four Stages. Voltage Free 2nd, 3rd &amp; 4th Stage Activation Configuration</p> <p>Common Positive</p> <p>Customer Set H1 &amp; H2 to Negative Switching. (See Below)</p> <p>Stage 1: Apply Power to Common +ve &amp; Stage 1 -ve</p> <p>Stage 2: Apply Power to Common +ve &amp; Stage 1 -ve &amp; connect Stage 2 -ve to Stage 1 -ve</p> <p>Stage 3: Apply Power to Common +ve &amp; Stage 1 -ve &amp; connect Stage 3 -ve to Stage 1 -ve</p> <p>Stage 4: Apply Power to Common +ve &amp; Stage 1 -ve &amp; connect Stage 2 -ve &amp; Stage 3 -ve to Stage 1 -ve</p>				
<p><b>Config: 1</b></p> <p>Two Stage Configuration</p> <p>Reverse Polarity Stage Monitoring</p> <p>Stage 1: Apply Power to Stage 1 +ve &amp; Stage 1 -ve</p> <p>Stage 2: Apply Power to Stage 1 +ve &amp; Stage 1 -ve &amp; connect Stage 2 -ve to Stage 1 -ve</p>					<p><b>Config: 3</b></p>				
<p><b>Set H1 &amp; H2 to -ve switching</b></p> <p>H1 ○ □ □</p> <p>H2 ○ □ □</p> <p>←</p> <p>Cut Link W1</p>									
<p><b>Set H1 &amp; H2 to -ve switching</b></p> <p>H1 ○ □ □</p> <p>H2 ○ □ □</p> <p>←</p> <p>Cut Link W1</p>									
<p><b>ALL DIMENSIONS IN MM</b></p> <p>IF IN DOUBT, ASK - DO NOT SCALE</p> <p><b>A3</b></p>									
<p><b>TITLE</b> D1XS1 / D1XS2 / G1NEXS1 / G1NEXS2 / STEXS1 / STEXS2 DC SOUNDER WIRING DIAGRAMS</p> <p><b>SCALE</b> NTS</p> <p><b>SHEET</b> 2 OF 3</p> <p><b>DRAWING NUMBER</b> D190-06-001</p>									
<p><b>EUROPEAN SAFETY SYSTEMS LTD</b></p> <p>WIRING SYSTEMS</p> <p>EUROPEAN SAFETY SYSTEMS LTD</p> <p>MANSELL ROAD</p> <p>LONDON W3 7QH</p> <p>WWW.ESS.COM</p>									
<p><b>THIS DRAWING AND ANY INFORMATION OR DESCRIPTIVE MATTER THEREIN IS COMMUNICATED IN CONFIDENCE AND SYSTEMS LTD. NEITHER THE WHOLE OR ANY PART THEREOF MAY BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MANUFACTURING OR TRADING PURPOSES WITHOUT THE WRITTEN CONSENT OF SYSTEMS LTD.</b></p> <p><b>© AS PER LATEST DATE OF ISSUE SHOWN ABOVE</b></p>									
DRAWING TO BS8888:2000. GEOMETRIC TOLERANCES TO ISO1101:1983. ANGULAR DIMENSIONAL TOLS		DRAWN R.S. RAIT		DATE 19/01/2022		SURFACE FINISH WEIGHT (Kg)			
CHECKED B. JISARD		DATE 19/01/2022		MATERIAL					
APPROVED R.N.POTTS		DATE 19/01/2022		ALTERNATIVE MATERIAL					
<p><b>STANDARDS</b></p> <p>D1x</p>									



1	2	3	4	5	6	7	8	9	10																				
<div style="border: 1px solid black; padding: 5px; display: inline-block;">  SWITCHES FOR STAGE OPERATION   CUSTOMER SUPPLIED         </div>																													
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">ISSUE</td> <td style="width: 10%;">MOD No</td> <td style="width: 10%;">REASON - INITIAL - DATE</td> <td colspan="7"></td> </tr> <tr> <td>1</td> <td></td> <td>INTRODUCTION RSR - 19/01/2022</td> <td colspan="7"></td> </tr> </table>										ISSUE	MOD No	REASON - INITIAL - DATE								1		INTRODUCTION RSR - 19/01/2022							
ISSUE	MOD No	REASON - INITIAL - DATE																											
1		INTRODUCTION RSR - 19/01/2022																											
<b>Single Stage Configuration</b> Config.: 1a Stage 1: Apply Power to Stage 1 Live & Stage 1 Neutral			<b>Three/Four Stage Configuration</b> Config.: 1b Stage 1: Apply Power to Live & Neutral & connect Stage 2 to Common Stage 2: Apply Power to Live & Neutral & connect Stage 3 to Common Stage 3: Apply Power to Live & Neutral & connect Stage 3 to Common Stage 4: Apply Power to Live & Neutral & connect both Stage 2 & Stage 3 to Common			<b>Two Stage Voltage Free Activation Configuration</b> Config.: 2 Power: Live & Neutral Stage 1: Connect Stage 1 to Common Stage 2: Connect Stage 2 to Common Stage 3: Connect both Stage 1 & Stage 2 to Common																							

**CUSTOM CONFIGURATION PRODUCT OPTION 'K'**

DRAWING TO BS8886:2000, GEOMETRIC TOLERANCES TO ISO1101:1983 AND ANGULAR DIMENSIONAL TOLS		DRAWN R.S. RAIT	DATE 19/01/2022	SURFACE FINISH MATERIAL	WEIGHT (kg)	ALL DIMENSIONS IN MM IF IN DOUBT, ASK - DO NOT SCALE		
CHECKED B. ISARD		DATE 19/01/2022	ALTERNATIVE MATERIAL	THIS DRAWING AND ANY INFORMATION OR DESCRIPTIVE MATTER HEREIN IS COMMUNICATED IN CONFIDENCE AND SYSTEMS LTD. NEITHER THE WHOLE OR ANY PART THEREOF IS TO BE REPRODUCED OR TRANSMITTED IN ANY MANNER WITHOUT THE WRITTEN CONSENT OF SYSTEMS LTD. © AS PER LATEST DATE OF ISSUE SHOWN ABOVE				TITLE D1XS1 / D1XS2 / GNEXS1 / GNEXS2 / STEXS1 / STEXS2 AC SOUNDER WIRING DIAGRAMS
APPROVED R.N.POTTS		DATE 19/01/2022	DRAWING NUMBER D190-06-005		SHEET 1 OF 1	SCALE NTS	DRAWING NUMBER D190-06-005	
STANDARDS D1x		EUROPEAN SAFETY SYSTEMS LTD LONDON W3 7QH WWW.ESS.COM						