







SON4B - 10 Tone Sounder & Bulb Beacon 'Sonora'




SON4 Bulb

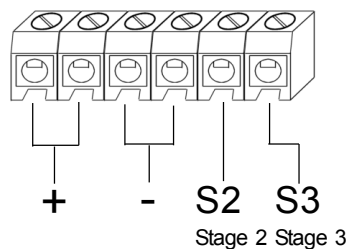





24vdc

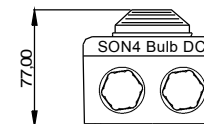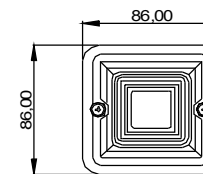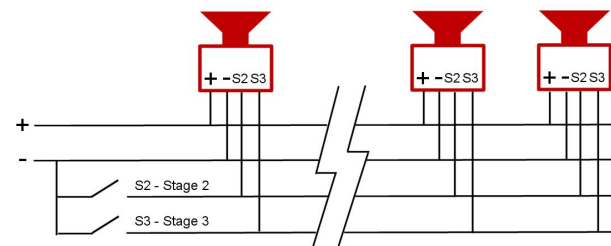


Insert cable through suitably sized M20 cable gland (Customer supplied)

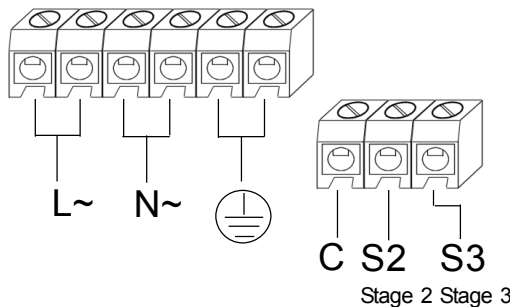

24, 115, 230vac

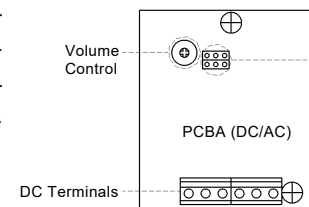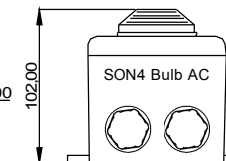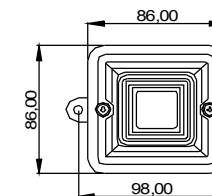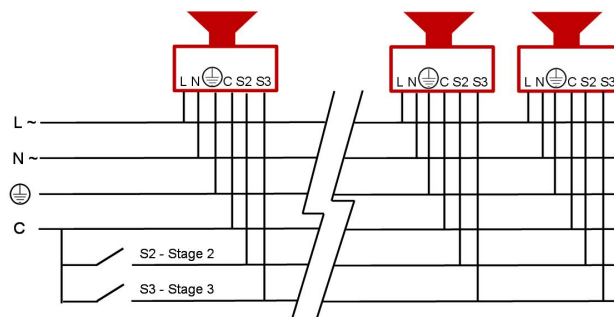

Tone Selection (See Table)

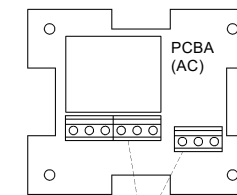

AC Terminals

Voltage :	24vdc	24vac	115vac	230vac
		50/60Hz	50/60Hz	50/60Hz

Voltage range :	+/-25%	+/-10%	+/-10%	+/-10%
-----------------	--------	--------	--------	--------

Current mA :	95mA*	180mA	50mA	30mA
--------------	-------	-------	------	------

* Current at nominal voltage on Tone 1.



>100dB(A)@1m

ISN0607-B


No liability is accepted for any consequence of the use of this document. The technical specification of this unit is subject to change without notice due to our policy of continual product development. All dimensions are approximate. This unit is sold subject to our standard conditions of sale, a copy of which is available on request.

SON4B 24vdc unit is CPD Compliant. EN54-3 Type B		Beacon is not compliant.
EN60529: IP66		
Stage1 tone	Frequency Description	The tones listed have been tested to EN54-3 and are compliant with the Construction Product Directive 89/106/EEC.
Tone 1	800/1000Hz @ 0.25 sec Alternating	
Tone 2	500/1200Hz @ 0.3Hz 0.5 sec Slow Whoop	
Tone 3	1200/500Hz @ 1Hz - DIN / PFEER P.T.A.P.	
Tone 4	544Hz (100mS)/440Hz (400mS) - NF S 32-001	
Tone 5	1000Hz Continuous	
Tone 8	2400/2900 @ 50Hz sw eeping	
Please Note: Stage 2 & 3 are not VDS Approved and VDS Approved for Wall Mounting Only		

Stage1 tone	Frequency Description	Stage2 (S2)	Stage3 (S3)
----------------	--------------------------	----------------	----------------

Tone 1	800/1000Hz @ 0.25 sec Alternating	Tone 8	Tone 5
Tone 2	500/1200Hz @ 0.3Hz 0.5 sec Slow Whoop	Tone 1	Tone 8
Tone 3	1200/500Hz @ 1Hz - DIN / PFEER P.T.A.P.	Tone 1	Tone 8
Tone 4	544Hz (100mS)/440Hz (400mS) - NF S 32-001	554Hz	Tone 2
Tone 5	1000Hz Continuous - PFEER Toxic Gas	Tone 1	Tone 6
Tone 6	Bell	Tone 1	Tone 8
Tone 7	800/1000Hz @ 7Hz Sweeping	Tone 5	Tone 1
Tone 8	2400/2900Hz @ 50Hz Sweeping	Tone 5	Tone 1
Tone 9	420Hz @ 0.625 sec Australian Alert	Tone 10	Tone 5
Tone 10	500-1200Hz 3.75sec /0.25sec. Australian Evac.	Tone 6	Tone 5

Fig. 1.

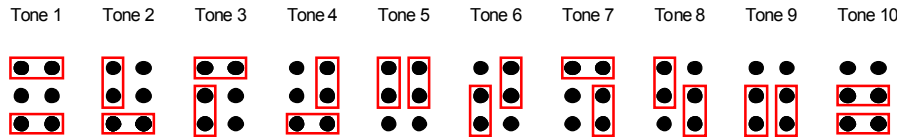

- **Tone selection.** To select a tone place the pin link in the position shown above (Fig. 1).
- **Sélection de la tonalité / réglage des commutateurs.** Pour sélectionner une tonalité, mettre les socles à broches dans les positions illustrées (Fig. 1).
- **Tonwahl / Einstellung der Schalter.** Zur Wahl eines Tons die Klemmenanschlüsse in die angegebenen Positionen bringen (Fig. 1).
- **Selezione tono / regolazione commutatore.** Per selezionare un tono, disporre i collegamenti a cavallotto nelle posizioni indicate (Fig. 1).
- **Seleção de tons / ajuste dos comutadores.** Para seleccionar um tom, coloque as ligações dos pinos na posição mostrada (Fig. 1).
- **Selección Tono / programación interruptores.** Para seleccionar un tono colocar las conexiones de los puentes en las posiciones mostradas (Fig. 1).
- **Toonselectie.** Om een toon te selecteren de pinverbinding in de hierboven aangetoonde positie plaatsen (Fig. 1)
- **Valg af tone.** Valg af en tone sker ved at anbringe stiftforbindelsen i ovenstående position (fig. 1).
- **Velge tone.** For å velge en tone må du plassere stiftleddet i posisjonen som vist ovenfor (fig. 1).
- **Tonval.** Välj en ton genom att placera stiftanslutningen i läget som visas ovan (fig. 1).



NOTE: Please check factory settings and ensure the correct alarm tone is selected for your country or application.

Pas op: bij ingebruikstelling dient u zich ervan te overtuigen dat de unit op de juiste toon is ingesteld.



- Volume Control
- Réglage du volume
- Steuerung der Lautstärke
- Controllo volume
- Controlo do Volume
- Control Volumen
- Volumen kontrol
- Volumeregeling
- Volum kontroll
- Volum kontroll

Internal Mounting Positions

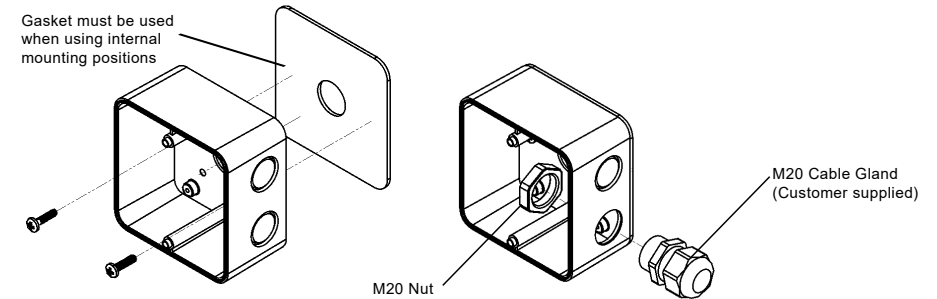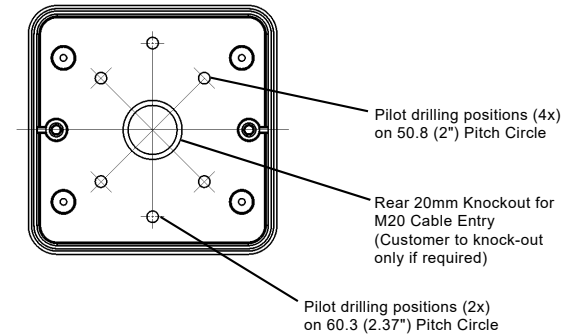

DC Installation:

1. Drill out pilot positions / rear knockout according to requirements
 2. Adhere supplied square gasket to outside of backbox
 3. Secure backbox to flat surface on wall or ceiling using screws (not supplied)
- Note: All drilled holes must have screws inserted and tightened, minimum two screws

AC Installation:

1. If not using external mounting lugs, follow steps shown in DC Installation
2. Insert M20 cable gland and nut as shown (not supplied) and tighten securely
3. Feed cable through cable gland and tighten gland according to manufacturers instructions

Cable Gland Installation:

1. Knock-out cable entry in position(s) desired
2. Insert M20 cable gland and nut as shown (not supplied) and tighten securely
3. Feed cable through cable gland and tighten gland according to manufacturers instructions

Notes:

Where knock-outs have been opened, these should have either a stopping plug or cable gland inserted.

Select cable gland IP Rating according to installation requirements.