
INSTRUCTION MANUAL BExBG10D-P & BExBG15D-P Xenon Beacon ATEx/IECEx & UKEx Gas & Dust



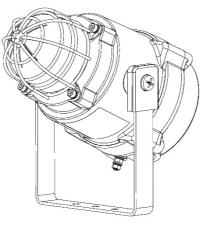

BExBG10D-P / BExBG15D-P

1. Product Table

Unit Type Code	Nominal Input Voltage	Nominal Input Current	Max I/P Voltage
BExBG10DPDC012	12Vdc	1.45A	14V
BExBG10DPDC024	24Vdc	660mA	28V
BExBG10DPDC048	48Vdc	340mA	54V
BExBG10DPAC115	115Vac	250mA	126V
BExBG10DPAC230	230Vac	110mA	253V
BExBG15DPDC024	24Vdc	860mA	28V
BExBG15DPDC048	48Vdc	480mA	54V
BExBG15DPAC115	115Vac	360mA	126V
BExBG15DPAC230	230Vac	170mA	253V

It is important that a suitable power supply is used to run the equipment. The power supply selected must have the necessary capacity to provide the input current to all of the units.

The above table shows the input current taken by the various beacons and shows the maximum voltage at which the beacons can be operated:

The input current will vary according to the voltage input level.

2. Warnings



- DO NOT OPEN WHEN AN EXPLOSIVE ATMOSPHERE IS PRESENT
- DO NOT OPEN WHEN ENERGIZED
- POTENTIAL ELECTROSTATIC CHARGING HAZARD CLEAN ONLY WITH A DAMP CLOTH
- COVER BOLTS CLASS A4-80
- USE HEAT RESISTING CABLES AND CABLE GLANDS (RATED 110°C) AT AMB. TEMPERATURES OVER 40°C

3. Marking & Rating Information

The BExBG10D-P & BExBG15D-P comply with the following standards for hazardous locations:

3.1 ATEX / IECEx & UKEx Ratings

	Standards	i		
EN60079-0:2018/IEC60079-0:2017 (ed.7): Explosive Atmospheres - Equipment General Requirements. EN60079-1:2014/IEC60079-1:2014 (ed.7): Explosive Atmospheres - Equipment Protection by Flameproof Enclosures "d". EN60079-31:2014/IEC60079-31:2013 (ed.2): Explosive Atmospheres - Equipment Dust Ignition Protection by enclosure "t".				
Model No:		Rating		
BExBG10D-P / BExBG15D-P	Ex db IIC T4 Gb Ta Ex tb IIIC T99°C Db Ex tb IIIC T114°C D Ex tb IIIC T1129°C D	Ta50°C to +4 b Ta50°C to +4	55°C	
See Product table f	or electrical ratings o	of each unit mode	el	
Certificate No. KEMA 00ATEX2006X IECEx KEM 10.0002X UL22UKEX2636X				
Epsilon x Equipment Group and Category:	$\langle x 3 \rangle$	II 2G II 2D		
CE Marking and Notified Body No.	CE	2813		
UKCA Marking and Approval Body No.		0518		

4. Zones, Gas Group, Category and Temperature Classification

The units can be installed in locations with the following conditions:

	Area Classification Gas	
Zone 1	Explosive gas air mixture likely to occur in normal operation.	
Zone 2	Explosive gas air mixture not likely to occur in normal operation, and if it does, it will only exist for a short time.	
	Gas Groupings	
Group IIA	Propane	
Group IIB Ethylene		
Group IIC	Hydrogen and Acetylene	
Tem	perature Classification for Gas Applications	
T1	450° C	
T2	300° C	
Т3	200° C	
T4	135° C	
	Area Classification Dust	
Zone 21	Explosive dust air mixture likely to occur in normal operation.	
Zone 22	Explosive dust air mixture not likely to occur in normal operation, and if it does, it will only exist for a short time.	
	Dust Groupings	
Group IIIA	Combustible Dusts	
Group IIIB	Non-Conductive Dusts	
Group IIIC	Conductive Dusts	
	Equipment Category	
2G, 2D		
	Equipment Protection Level	
Gb, Db,		
Maxim	um Surface Temperature for Dust Applications	
99°C at +40°C 114°C at +55°C 129°C at +70°C		
	Ambient Temperature Range	
-50°C to +70°C Gas Groups IIA, IIB and IIC -50°C to +70°C Dust Groups IIIA, IIB and IIC		
IP Rating		
IP66/67 to EN/IEC60529 and IP6X to EN/IEC60079-0, EN/IEC60079-31		
The beacon must only be installed by suitably qualified personnel in accordance with the latest issues of the relevant standards:		
EN60079-14 / IEC60079-14: Explosive atmospheres - Electrical installations design, selection and erection EN60079-10-1 / IEC60079-10-1: Explosive atmospheres - Classification of areas. Explosive gas atmospheres EN60079-10-2 / IEC60079-10-2: Explosive atmospheres - Classification of areas. Explosive dust atmospheres		
The installation of the beacon must also be in accordance with any local codes that may apply and should only be carried out by a competent electrical engineer who has the necessary training.		

5. Special Conditions for Safe Use

Repair of the flamepath / flameproof joints is not permitted.

The enclosure is non-conducting and may generate an ignition-capable level of electrostatic charges under certain extreme conditions (such as high-pressure steam). The user should ensure that the equipment is not installed in a location where it may be subjected to external conditions that might cause a build-up of electrostatic charges on non-conducting surfaces.

Additionally, cleaning of the equipment should be done only with a damp cloth.

6. Product Mounting and Access

The location of the beacon should be made with due regard to the area over which the warning signal must be visible. They should only be fixed to services that can carry the weight of the unit.

The BEx beacon should be secured to any flat surface using at least two of the three 7mm fixing holes on the stainless steel U shaped mounting bracket. See Figure 1. The required angle can be achieved by loosening the two large bracket screws in the side of the unit, which allow adjustment of the beacon in steps of 18°. On completion of the installation then two large bracket adjustment screws on the side of the unit must be fully tightened to ensure that the unit cannot move in service.

The equipment should not be mounted with the dome facing downwards of horizontal.

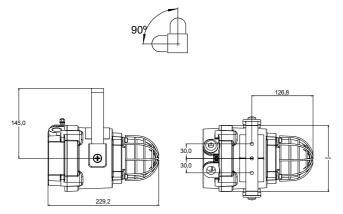


Fig. 1 Fixing Location for Beacon

7. Access to the Flameproof Enclosure



Warning – High voltage may be present, risk of electric shock. DO NOT open when energised, disconnect power before opening.



Warning – Hot surfaces. External surfaces and internal components may be hot after operation, take care when handling the equipment.

To access the Ex d chamber, remove the four M6 hexagon socket head screws and withdraw the flameproof cover taking extreme care not to damage the flameproof joints in the process. M6 cover screws are Class A4-80 stainless steel and only screws of this category can be used for the enclosure.

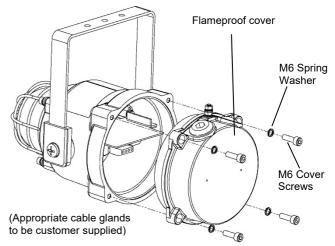


Fig. 2 Accessing the Explosion proof Enclosure.

On completion of the installation, the flameproof joints should be inspected to ensure that they are clean and that they have not been damaged during installation.

On completion of the installation, the flameproof joints should be inspected to ensure that they are clean and that they have not been damaged during installation.

Check that the earth bonding wire between the two castings is secure and the 'O' ring seal is in place. When replacing the flameproof cover casting ensure that it is square with the flameproof chamber casting before inserting. Carefully push the cover in place allowing time for the air to be expelled. Only after the cover is fully in place should the four M6 Stainless Steel A4-80 cover bolts and their spring washer be inserted and tightened down. If the cover jams while it is being inserted, carefully remove it and try again. Never use the cover bolts to force the cover into position.

8. Selection of Cable. Cable Glands, Blanking Elements & Adapters

When selecting the cable size, consideration must be given to the input current that each unit draws (see table above), the number of beacons on the line and the length of the cable runs. The cable size selected must have the necessary capacity to provide the input current to all of the beacons connected to the line.

For ambient temperatures over +40°C the cable entry temperature may exceed +70°C and therefore suitable heat resisting cables and cable glands must be used, with a rated service temperature of at least 110°C

The dual cable gland entries have an M20 x 1.5 entry thread. To maintain the ingress protection rating and mode of protection, the cable entries must be fitted with suitably rated ATEX / IECEx or UKEx certified cable glands and/or suitably rated ATEX / IECEx or UKEx certified blanking devices during installation according to EN / IEC60079-14.

If a high IP (Ingress Protection) rating is required then a suitable sealing washer must be fitted under the cable glands or blanking plugs.

For use in explosive dust atmospheres, a minimum ingress protection rating of IP6X must be maintained.

The BEx beacon range can be supplied with the following types of adapters:


M20 to ¹/₂" NPT M20 to ³/₄" NPT M20 to M25

It is important to note that stopping plugs cannot be fitted onto adapters, only directly onto the M20 entries.

Any other adapters used must be suitably rated and ATEX / IECEx or UKEx certified adapters.

9. Earthing

Both AC and DC beacon units must be connected to an earth. The units are provided with internal and external earth terminals which are both located on the terminal chamber section of the unit.

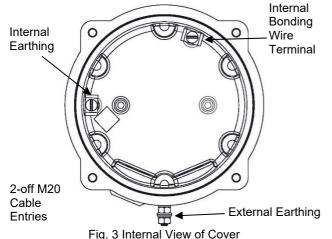

When using the internal earth terminal ensure that the stainless steel M4 flat washer is between the incoming earth wire and the enclosure.

Internal earthing connections should be made to the Internal Earth terminal in the base of the housing using a ring crimp terminal to secure the earth conductor under the earth clamp. The earth conductor should be at least equal in size and rating to the incoming power conductors. Tighten M4 Earth screw to 1Nm.

External earthing connections should be made to the M5 earth stud, using a ring crimp terminal to secure the earth conductor to the earth stud. The external earth conductor should be at least 4mm² in size. Tighten the Earth nut to 3Nm. Please firmly tighten the external grounding terminal so that the stud does not become loose and lay the ground wire so that it is not caught by twisting and sagging.

10. Cable Connections

Electrical connections are to be made into the terminal blocks on the PCBA located in the flameproof enclosure. See section 7 of this manual for access to the flameproof enclosure.

Wires having a cross sectional area between 0.5 mm^2 to 2.5mm^2 can be connected to each terminal way. If an input and output wire is required the 2-off Live/Neutral or +/- terminals can be used. If fitting 2-off wires to one terminal way the sum of the 2-off wires must be a maximum cross sectional area of 2.5mm^2 . Strip wires to 8 mm. Wires may also be fitted using ferrules. Terminal screws need to be tightened down with a tightening torque of 0.45 Nm / 5 Lb-in. When connecting wires to the terminals great care should be taken to dress the wires so that when the cover is inserted into the chamber the wires do not exert excess pressure on the terminal blocks. This is particularly important when using cables with large cross sectional areas such as 2.5mm^2 .

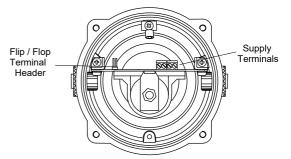


Fig 4. Internal View of BExBG10D and BExBG15D 10 and 15 Joule Beacons

11. AC Wiring

A 4-way terminal block is provided on the AC beacon. There are 2-off Live and 2-off Neutral terminals in total.

11.1 Wiring Diagram

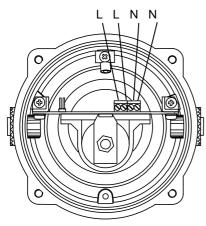


Fig. 5 AC Terminals

12. DC Wiring

A 4-way terminal block is provided on the AC beacon. There are 2-off +ve and 2-off -ve terminals in total.

12.1 Wiring Diagram

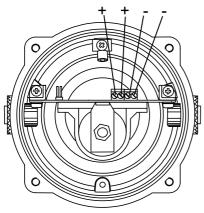


Fig. 6 DC Terminals

13. Line Monitoring

On the BExBG10D-P and BExBG15D-P DC beacons, dc reverse line monitoring can be used if required. All DC beacons have a blocking diode fitted in their supply input lines. An end of line monitoring diode or an end of line monitoring resistor can be connected across the +ve and –ve terminals. If an end of line resistor is used it must have a minimum resistance value of 3k3 ohms and a minimum wattage of 0.5 watts or a minimum resistance value of 500 ohms and a minimum wattage of 2 watts.


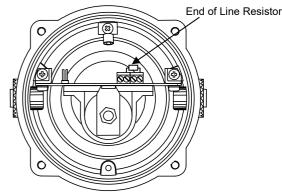


Fig. 7 End of Line Resistor Placement

14. Settings

14.1 Synchronised Operation

All BExBG10D-P and BExBG15D-P beacons that are connected to the same supply line will have a synchronised flash rate at one flash every second. To ensure that the units will be synchronised check that the pin header is not fitted, i.e. the two header pins are not shorted together (see Figure 8).

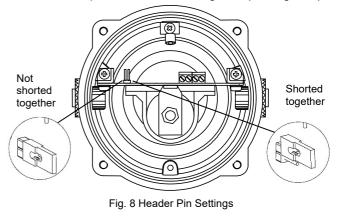



Two beacons can be mounted close to each other to form a flip-flop operation, where the beacons will flash alternately. To achieve this mode of operation, fit a pin header to the flip-flop header pins on the electronics board, i.e. the two header pins are shorted together, (see figure 8) on one of the two beacons. The first flash on the beacon that has the header fitted will be delayed by $\frac{1}{2}$ second. The two beacons will then flash alternately every $\frac{1}{2}$ a second

15. Interchangeable & Spare Parts



Warning – Hot surfaces. External surfaces and internal components may be hot after operation, take care when handling the equipment.

The beacon cover is interchangeable, contact E2S Ltd for a replacement cover available in various colours.

To change the cover, unscrew the M5 socket head screws and remove the M5 screws, M5 spring & flat washers.

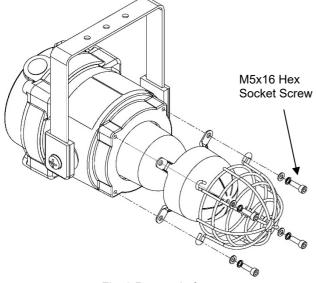


Fig. 9 Removal of cover

Remove the guard and replace the old cover with the new cover.


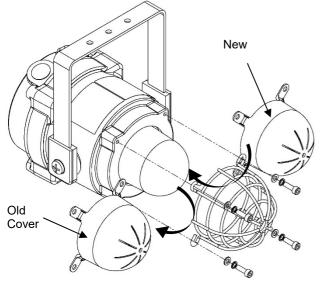


Fig. 10 Changing of cover

Fit the guard back on to the cover and casting, align the holes of the guard, cover and casting. To reattach the cover, the fixings MUST be in the order shown in figure 11.

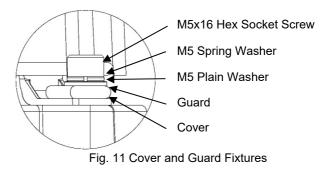

16. Maintenance, Overhaul & Repair

Maintenance, repair and overhaul of the equipment should only be carried out by suitably qualified personnel in accordance with the current relevant standards:

EN60079-19 IEC60079-19	Explosive atmospheres - Equipment repair, overhaul and reclamation
EN 60079-17 IEC60079-17	Explosive atmospheres - Electrical installations inspection and maintenance

The acoustic horn is made out of ABS plastic, therefore to avoid a possible ELECTROSTACTIC CHARGE the unit must only be cleaned with a damp cloth.

Units must not be opened while an explosive atmosphere is present.

If opening the unit during maintenance operations a clean environment must be maintained and any dust layer removed prior to opening the unit.

1	2 3	4	5	6	7	8	9		10	
						ISSUE MOI		REASON - INI ⁻ DUCTION 24/03/2022	TIAL - DATE	-
A		ORING RESISTOR, CUSTOMER SUPPLIED, 3K3Ω MIN, 0.5W MIN					RSR - 2	24/03/2022		
Single Stage Configuration	Con	fig.: 1								
Optional Line Monitoring Negative switching										
B Stage 1: Apply Power to +ve	& -ve									в
с										С
-Ve	e -ve +ve +ve									
	out in out									
D										D
										E
	R1									
F										F
DRAWING TO BS8888:2000 GEOMETRIC TOLERANCES TO ISO1101:1983	DRAWN DATE	SURFACE FINISH WEIGHT (Kg)	THIS DRAWING AND A	NY INFORMATION OR DESCRIPTIVE	ြာင			$\bigoplus \square$	A3	
LINEAR DIMENSIONAL TOLS ANGULAR DIMENSIONAL TOLS	R.S.RAIT 24/03/2022 CHECKED DATE	MATERIAL	MATTER THEREIN IS C IS THE COPYRIGHT F SYSTEMS LTD. NEITHEI BE DISCLOSED 1	NY INFORMATION OR DESCRIPTIVE OMMUNICATED IN CONFIDENCE AND YGOPERTY OF EUROPEAN SAFETY R THE WHOLE OR ANY EXTRACT MAY OANED, COPIED OR USED FOR NDERING PURPOSES WITHOUT THEI ITEN CONSENT.		IF IN DOUBT, DO NOT SCA		xBG10D, BExBG		-
G STANDARDS	B.ISARD 24/03/2022	2				BE		NG DIAGRAM		G
BEx	APPROVED DATE	ALTERNATIVE MATERIAL	C EUROPEAN AS PER LATEST D	SAFETY SYSTEMS LTD. DATE OF ISSUE SHOWN ABOVE	ACTON LONDON W3 7QH WWW.E2S.COM	SCALE			204	
	R.N.POTTS 24/03/2022	2				NTS	1 OF 1	D210-06-	-201	

A	1 2 3 4 5 6 7 8 9 10 ISSUE MOD No. REASON - INITIAL - DATE 1 Image: Colspan="4">Image: Colspan="4">Image: Colspan="4">Image: Colspan="4">10 1 Image: Colspan="4">Image: Colspan="4">Image: Colspan="4">10 1 Image: Colspan="4">Image: Colspan="4" Image: Colspan="4">Image: Colspan="4">Image: Colspan="4">Image: Colspan="4">Image: Colspan="4">Image: Colspan="4">Image: Colspan="4">Image: Colspan="4" Image: Colspan="4" Image: Colspan="4" Image: Colspan="4" Image: Colspan="4" Image: Colspan="4" Image: Colspan="4" Image: Colspan="4" Image: Colspan="4" Image: Colspan="4"	A
	Single Stage Configuration Config.: 1	_
в	Stage 1: Apply Power to Live & Neutral	В
с		с
	Live Neutral in out in out	
D		D
E		E
F		F
G	STANDARDS B.ISARD 24/03/2022 B.ISARD 24/03/2022 B.ISARD ALTERNATIVE MATERIAL C BUROPEAN SAFETY SYSTEMS LTD. ALTERNATIVE AND BUROPEAN SAFETY	_ 2 G
	BEX APPROVED DATE R.N.POTTS 24/03/2022 ALTERNATIVE MATERIAL ALTERNATIVE	

EU Declaration of Conformity



Manufacturer:	European Safety Systems Ltd. Impress House, Mansell Road, Acton London, W3 7QH United Kingdom
Authorised Representative:	E2S Warnsignaltechnik UG Charlottenstrasse 45-51 72764 Reutlingen Germany
Equipment Type:	Electronic Beacons Types BExBG05D(-P)(-SIL), BExBG10D(-P)(-SIL), BExBG15D(-P)(-SIL), BExBG21D(-P), BExTBG05D(-P), BExBGL2D(-P), BExBG05E(-P), BExBG10E(-P) and BExBG15E(-P)

Directive 2014/34/EU: Equipment and Protective Systems for use in Potentially Explosive Atmospheres (ATEX)

	Notified Body for EU type Examination (Module B):	Dekra Certification B.V. Notified Body No.: 0344 Meander 1051, 6825 MJ Arnhem, The Netherlands
	EU-type Examination Certificate (Module B):	KEMA 00ATEX2006X
	Notified Body for Quality Assurance Notification / Conformity to EU-type based on quality assurance of the production process (Module D):	Sira Certification Service Notified Body No.: 2813 CSA Group Netherlands B.V, Utrechtseweg 310, 6812 AR, Arnhem, Netherlands
	Quality Assurance Notification (Module D):	SIRA 05 ATEX M342
	Provisions fulfilled by the equipment:	I 2G Ex db IIC T6T3 Gb II 2G Ex db eb IIC T5T4 Gb II 2D Ex tb IIIC T60 °CT200 °C Db
	Standards applied:	EN IEC 60079-0 : 2018 EN 60079-1 : 2014 EN 60079-7 : 2015 + A1 : 2018 EN 60079-31 : 2014
l	Directive 2014/30/EU: Electromagnetic Compatibility Directive (EMC)	
	Standards applied:	EN 61000-6-1:2007 EN 61000-6-2:2005 EN 61000-6-3:2007 / A1:2011 / AC: 2012 EN 61000-6-4:2007 / A1: 2011

Directive 2011/65/EU: Restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS) The product and all the components contained within it are in accordance with the restriction of the use of hazardous substances in electrical and electronic

The product and all the components contained within it are in accordance with the restriction of the use of hazardous substances in electrical equipment, including amendment by Directive 2015/863/EU.

Regulation (EC) 1907/2006: Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH)

The product and all the components contained within it are free from substances of very high concern.

Other Standards and Regulations

EN 60529:1991 + A1:2000 + A2:2013. - Degrees of protection provided by enclosures (IP code) – enclosure rated IP66/67

EU Declaration of Conformity



On behalf of European Safety Systems Ltd., I declare that, on the date the equipment accompanied by this declaration is placed on the market, the equipment conforms with all technical and regulatory requirements of the above listed directives, regulations and standards.

This Declaration is issued under the sole responsibility of the manufacturer.

Conten Her

Martin Streetz Quality Assurance Manager

Document No.: Date and Place of Issue: DC-004_Issue_N London, 20/04/2022

E2S Telephone: +44 (0)20 8743 8880 Fax: +44 (0)20 8740 4200 Email: sales@e2s.com www.e2s.com DC-004_Issue_N (BExBG) - Page 2 of 2 - QAF_252_Issue_5





Manufacturer:	European Safety Systems Ltd. Impress House, Mansell Road, Acton London, W3 7QH United Kingdom
Equipment Type:	Electronic Beacons Types BExBG05D(-P)(-SIL), BExBG10D(-P)(-SIL), BExBG15D(-P)(-SIL), BExBG21D(-P), BExTBG05D(-P), BExBGL2D(-P), BExBG05E(-P), BExBG10E(-P) and BExBG15E(-P)

Directive UKSI 2016:1107 (as amended by UKSI 2019:696) - Schedule 3A, Part 1 : Product or Protective System Intended for use in Potentially Explosive Atmospheres <u>(UKCA)</u>

Notified Body for UK type Examination (Module B):	UL International (UK) Ltd Notified Body No.: 0843 Unit 1-3 Horizon Kingsland Business Park, Wade Road, Basingstoke, Hampshire RG24 8AH UK			
UK-type Examination Certificate (Module B):	UL21UKEX2636X			
Notified Body for Quality Assurance Notification / Conformity to EU-type based on quality assurance of the production process (Module D):	Sira Certification Service Notified Body No.: 0518 Rake Lane, Eccleston, Chester CH4 9JN, UK			
Quality Assurance Notification (Module D):	CSAE 22UKQAN0046			
Provisions fulfilled by the equipment:	II 2G Ex db IIC T6T3 Gb II 2G Ex db eb IIC T5T4 Gb II 2D Ex tb IIIC T60°CT200° Db IP6X Dust Protection to EN60079-0 / EN60079-31			
Standards applied:	EN IEC 60079-0: 2018 EN 60079-1: 2014 EN IEC 60079-7: 2015 + A1: 2018 EN 60079-31: 2014			
Directive 2014/30/EU: Electromagnetic Compatibility Directive (EMC)				

Standards applied:

EN 61000-6-1:2007 EN 61000-6-2:2005 EN 61000-6-3:2007 / A1:2011 / AC: 2012 EN 61000-6-4:2007 / A1: 2011

Directive 2011/65/EU: Restriction of the use of certain hazardous substances in electrical and electronic equipment (ROHS)

The product and all the components contained within it are in accordance with the restriction of the use of hazardous substances in electrical and electronic equipment, including amendment by Directive 2015/863/EU.

Regulation (EC) 1907/2006: Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH)

The product and all the components contained within it are free from substances of very high concern.

Other Standards and Regulations

EN 60529:1991 / A1:2000 / A2:2013 - Degrees of protection provided by enclosures (IP code) - enclosure rated IP66/67

UKCA Declaration of Conformity



On behalf of European Safety Systems Ltd., I declare that, on the date the equipment accompanied by this declaration is placed on the market, the equipment conforms with all technical and regulatory requirements of the above listed directives, regulations and standards.

This Declaration is issued under the sole responsibility of the manufacturer.

loten Hi

Martin Streetz Quality Assurance Manager Document No.: DC-105_ Date and Place of Issue: London,

DC-105_Issue_A London, 12/09/2022